

VENTUS W044

1. Select a location for the remote thermo-hygrometer that is within the effective transmission range of 75 meters. Shorten the distance if obstacle is between the monitor & remote sensor. If a monitor is used.
2. Use a small screwdriver to loosen the screws on the battery door of the remote sensor. Insert 2 pieces of AAA batteries according to the polarity indicated.
3. Assign channel 1,2 or 3 to the remote sensor by setting the slide switch inside the battery compartment.
4. Press "Tx" button inside the battery compartment of the remote sensor to transmit temperature & humidity data to the monitor if you use a monitor. Then close the battery door and tighten the screws.
5. If you use a monitor: Hold "CHANNEL/SEARCH" button on the monitor to search for all remote sensors. The temperature & humidity readings of your selected channel number will be displayed on the monitor if RF transmission is successful.



Xeecom ApS
Denmark
www.xeecom.com
www.ventusdesign.com

Copyright Xeecom ApS

If at any time in the future you need to dispose of this product please note that:
Waste electrical products should not be disposed together with household waste.
Please recycle where facilities exist. Check with your local Authority or retailer
For recycling advice (Waste Electrical and Electronic Equipment directive)

CE CE tested to comply with CE standards