


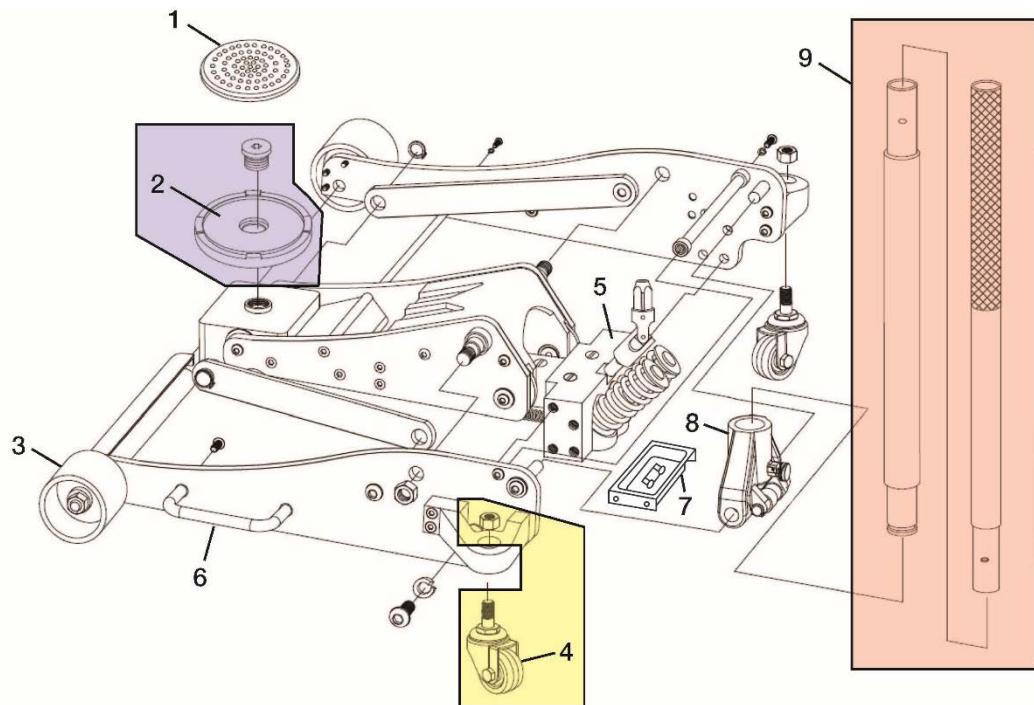

BH1A2500 Exploded View 20150310



NO	TOOL	PART	PART DESCRIPTION
1	BH1A2500	BH1A2500-01	REP N 1 RUBBER SADDLE
2	BH1A2500	BH1A2500-02	REP N 2 METALLIC SADDLE
3	BH1A2500	BH1A2500-03	REP N 3 FRONT FIX WHEELS
4	BH1A2500	BH1A2500-04	REP N 4 REAR ROTATING WHEELS
5	BH1A2500	BH1A2500-05	REP N 5 PUMP WITH UNI-JOINT
6	BH1A2500	BH1A2500-06	REP N 6 LATERAL U SHAPED HANDLE
7	BH1A2500	BH1A2500-07	REP N 7 METAL TRAY
8	BH1A2500	BH1A2500-08	REP N 8 YOKE
9	BH1A2500	BH1A2500-09	REP N 9 PUMP ACTION BAR