
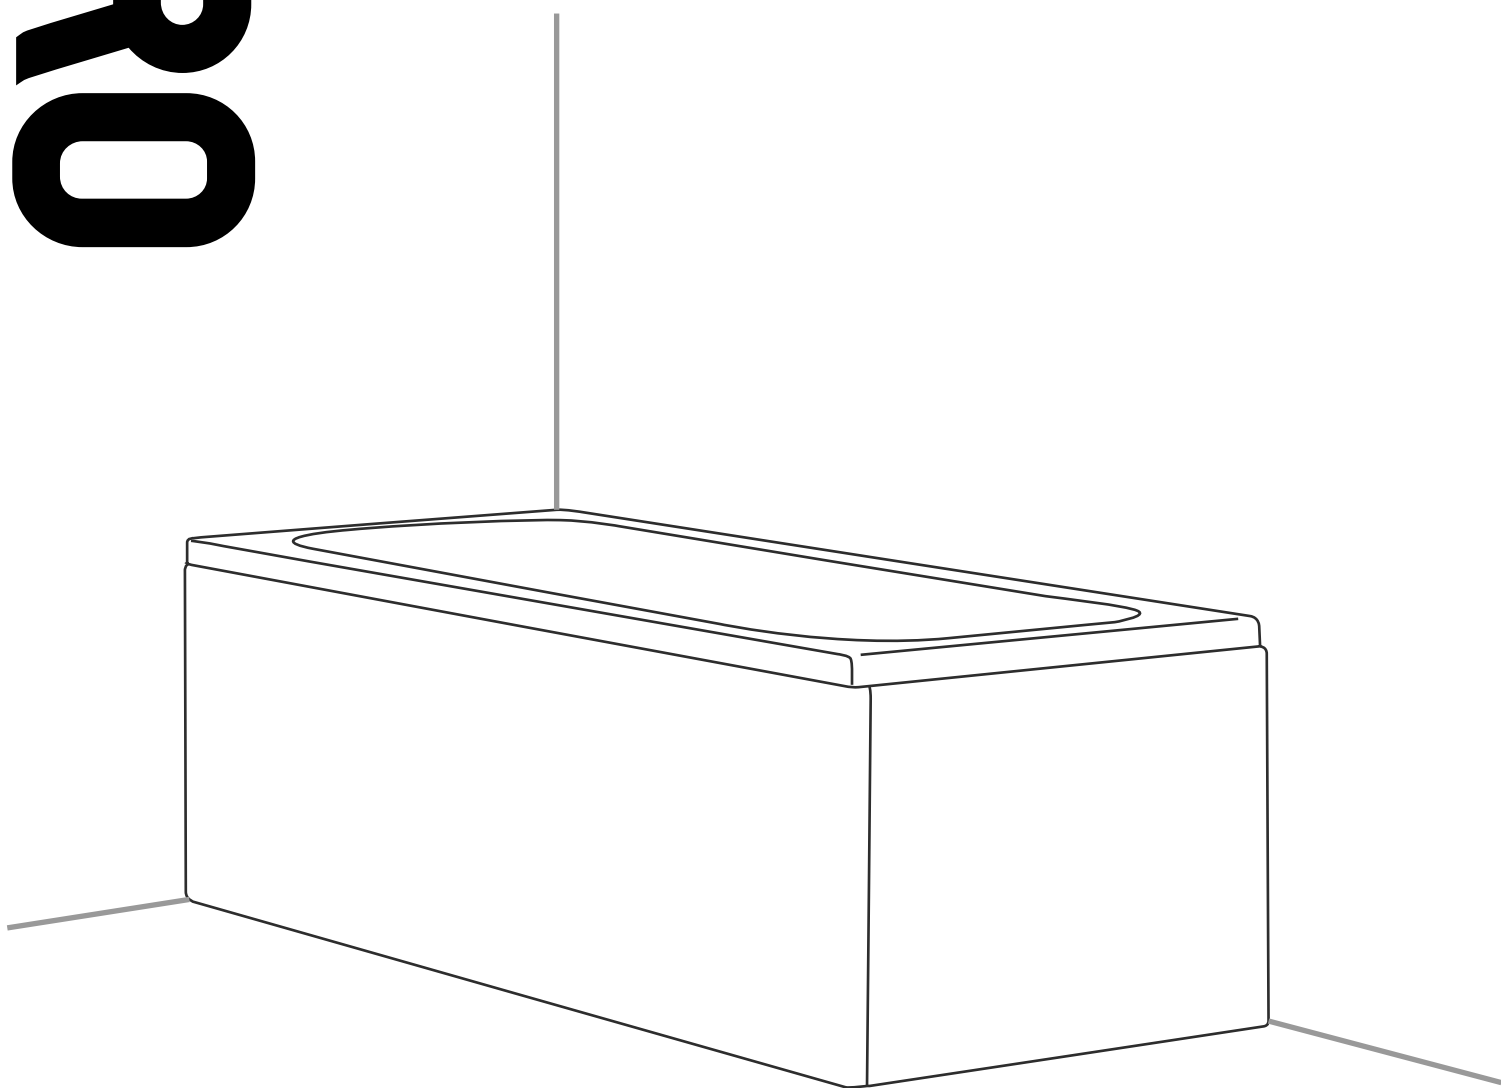


NORO




SINGLE

Getting Start

	Googles are recommended to protect the eyes		Caution: Always Handle Glass With Care! Always protect the edges and corners of the glass when assembling.
	2 people are recommended to assemble this shower enclosure		Gloves are recommended to prevent slippery on glass

Tools Needed:

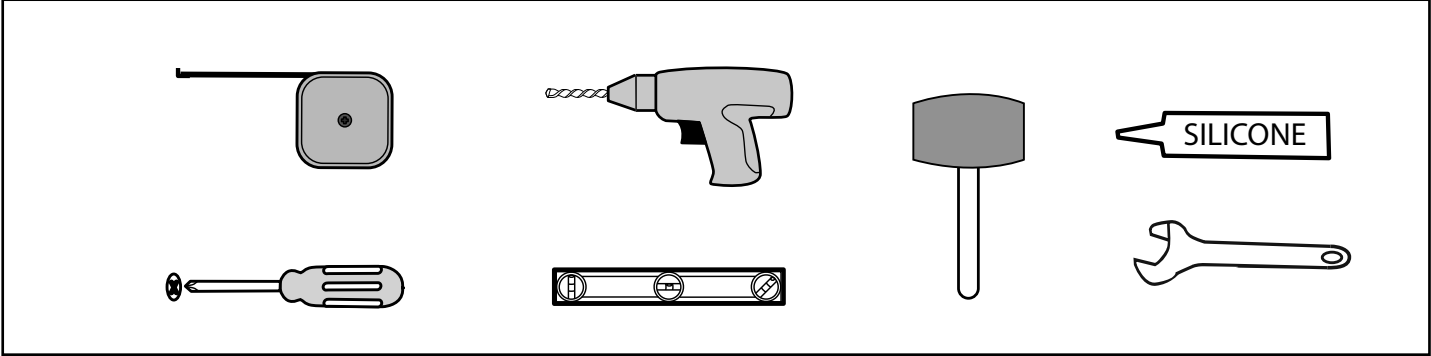


Accessories Bags:

a




M4 ST4x40mm
x 7

b




ST4x15mm
x 6

c




ST4x12mm
x 3

d

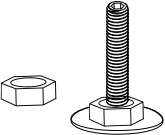


x 4

e

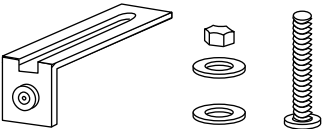


x 4

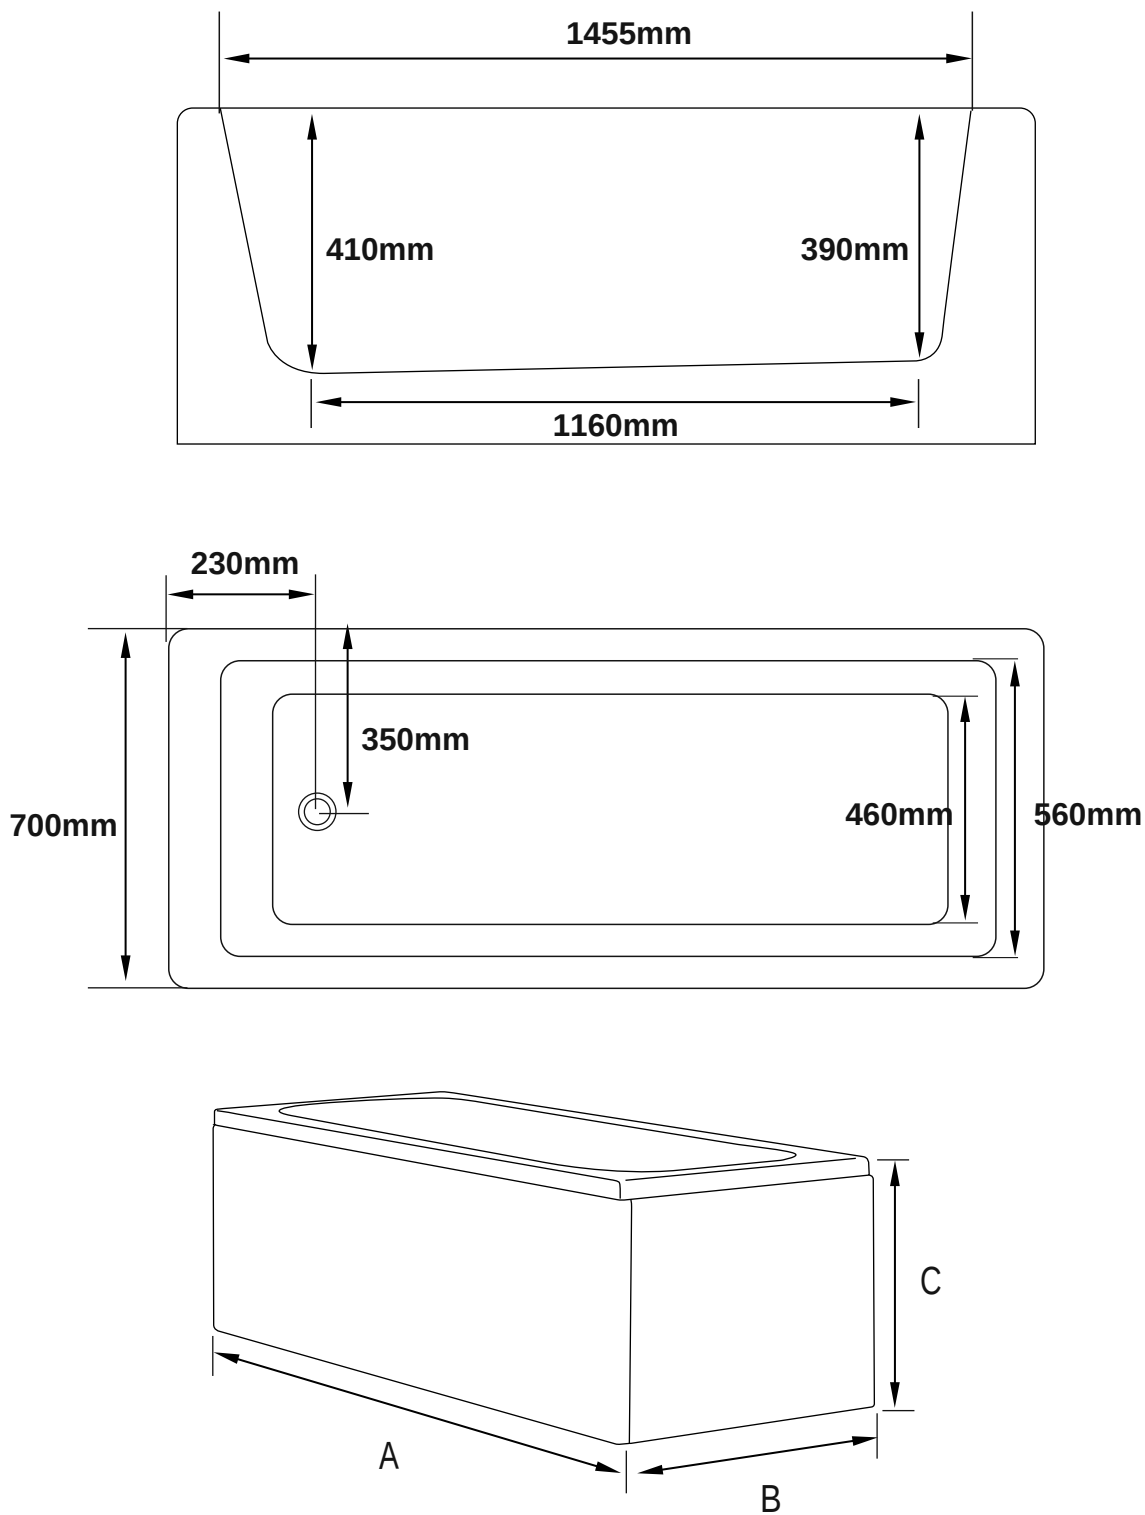


Model	A	B	C
SINGLE	1595mm	700mm	560-585mm

Exploded View:

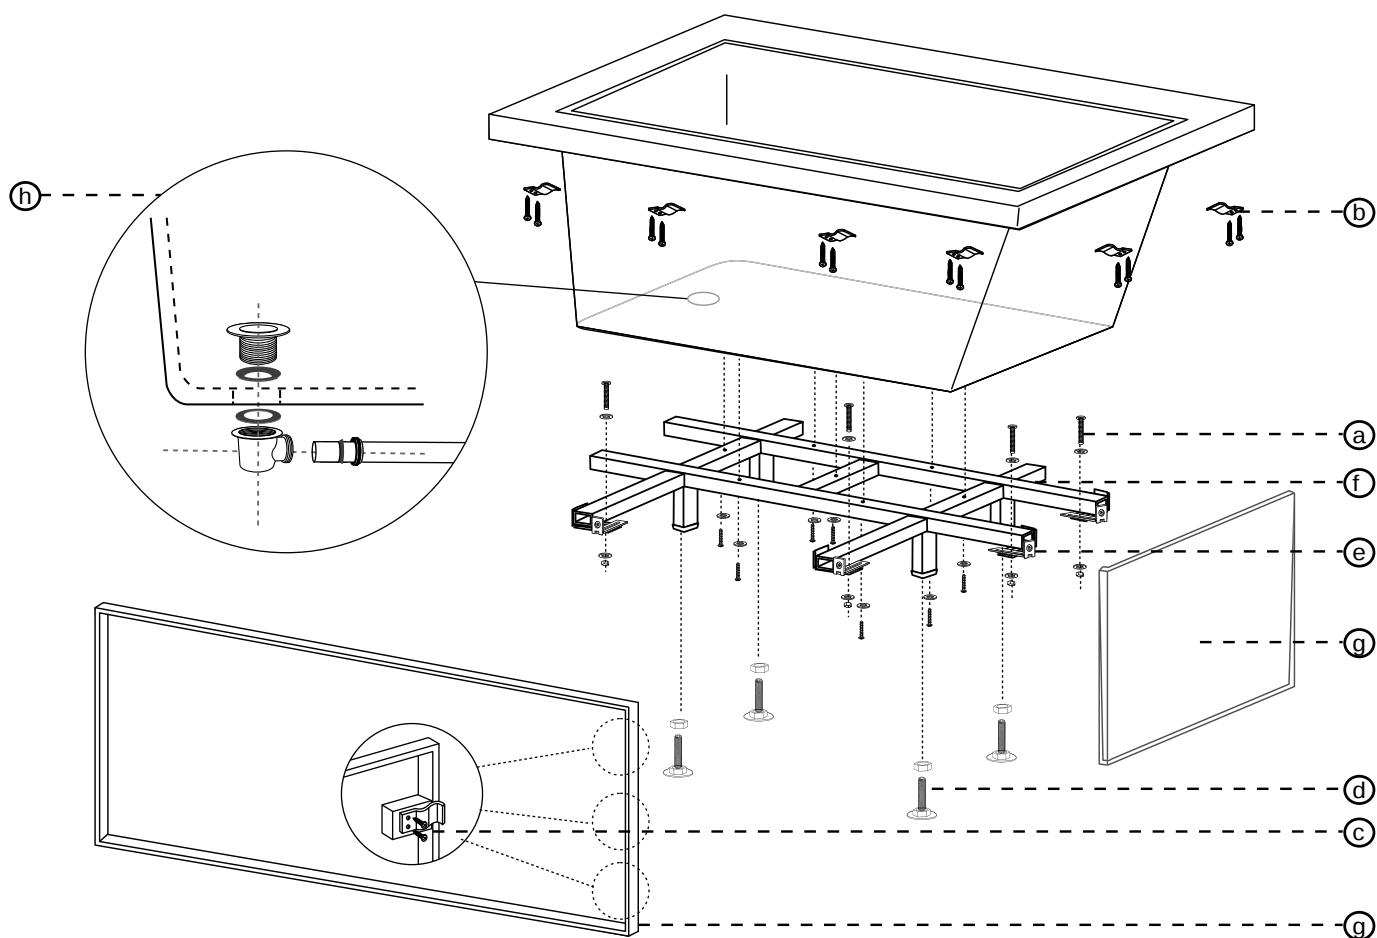


Drawing Nr.	Art Nr.	Description	Unit
a	9237	ST4x40mm screws and washer	Set
b		ST4x15mm screws with clips	
c		ST4x12mm screws with clips	
d		Bathtub legs	
e		L-connector for stand	
f	9234	Stainless-steel stand with screws	Set
g	9230	Skirt panels - long and short	Set
h	9238	Drainage complete kit	Set

1

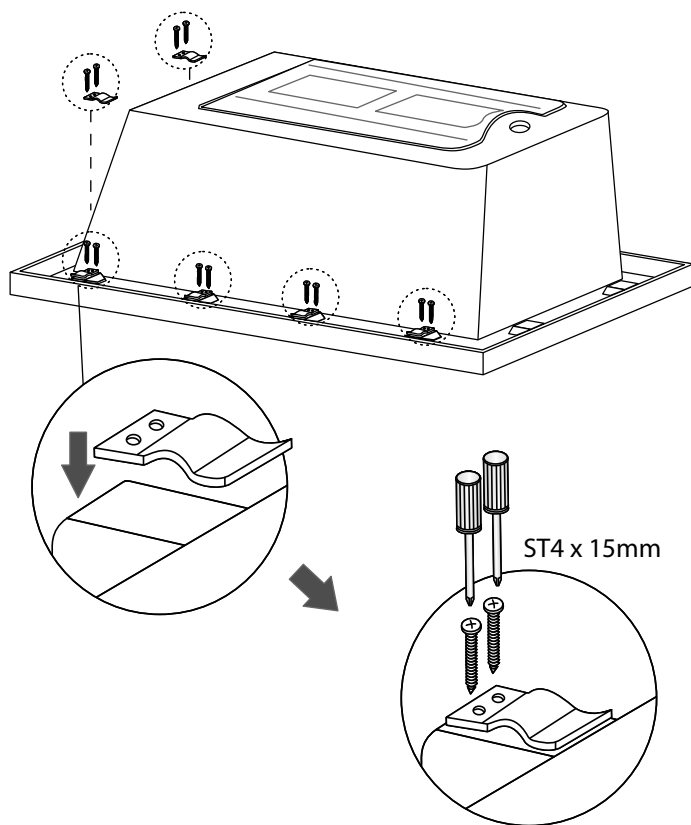


2

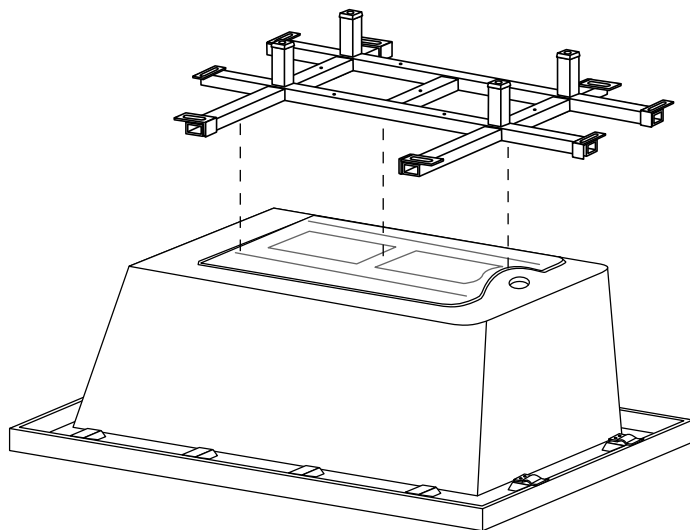


3


ST4 x 40mm

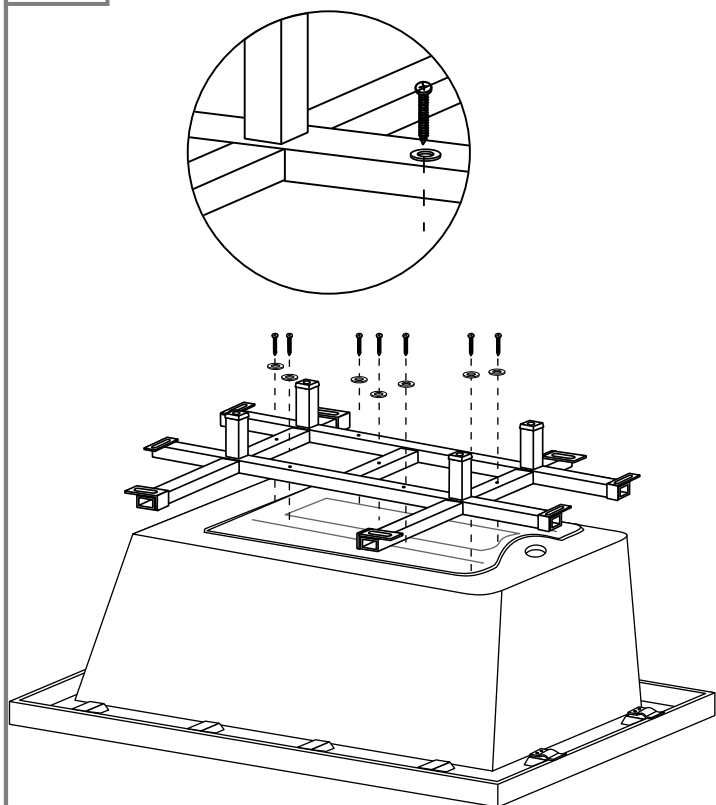


4

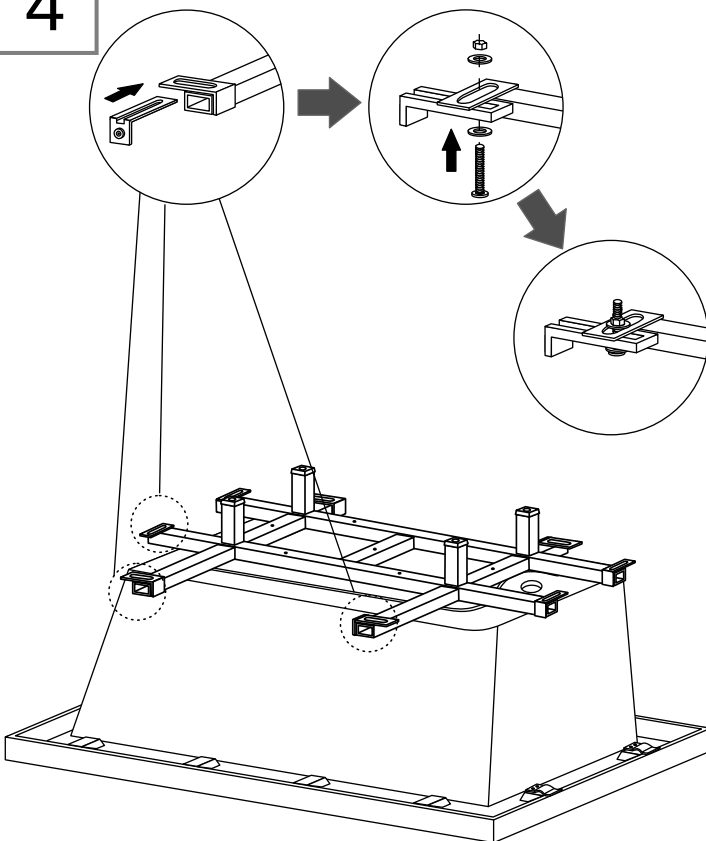


5

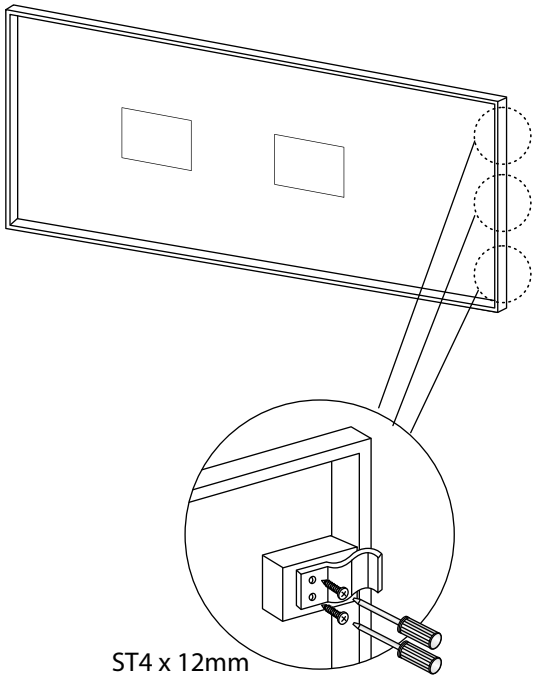


6

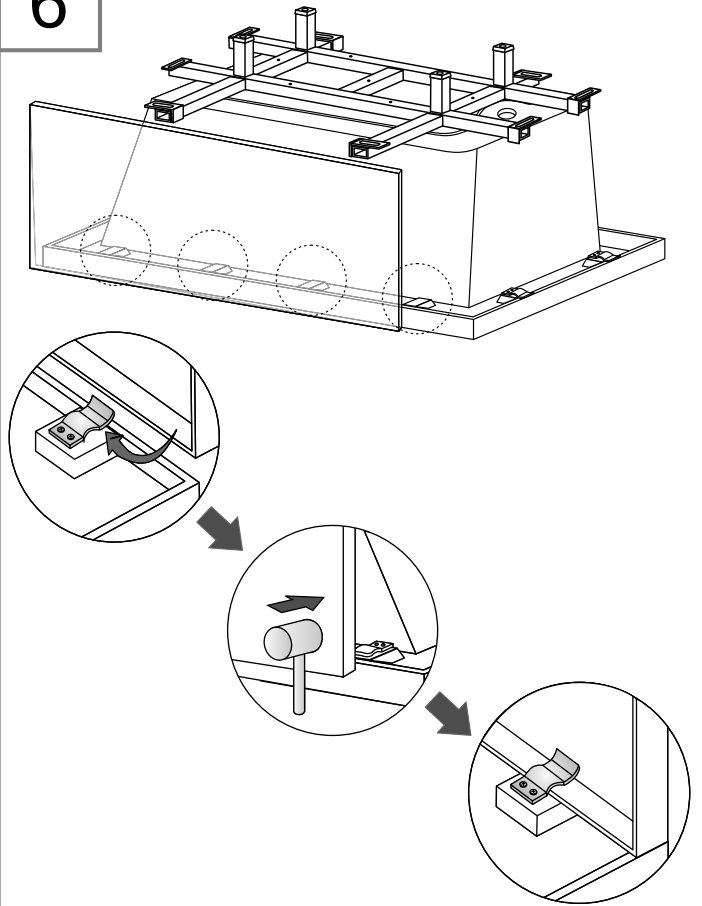


7

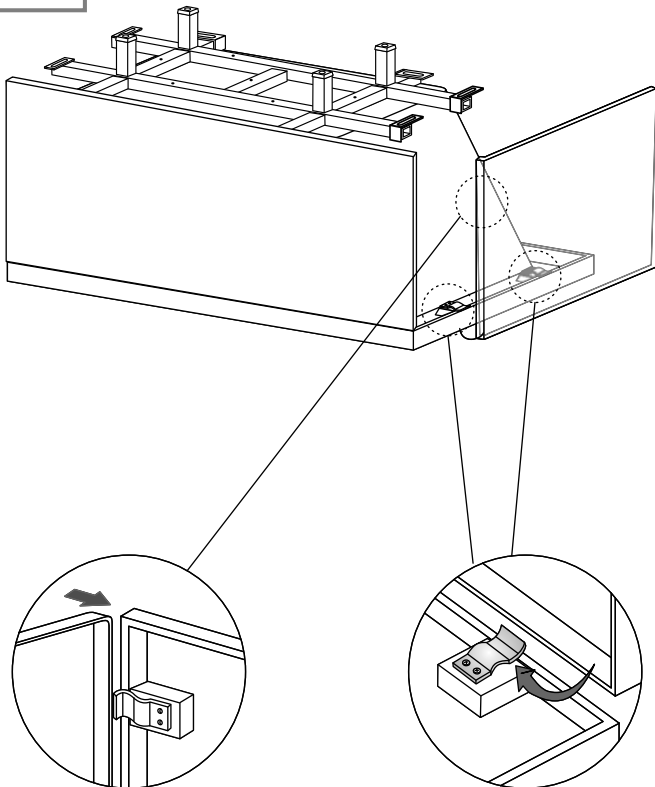



8

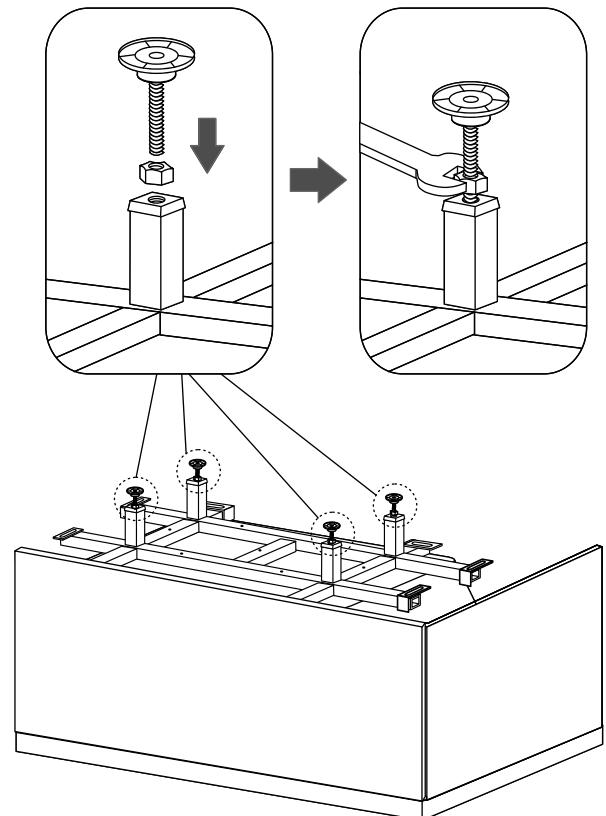

9

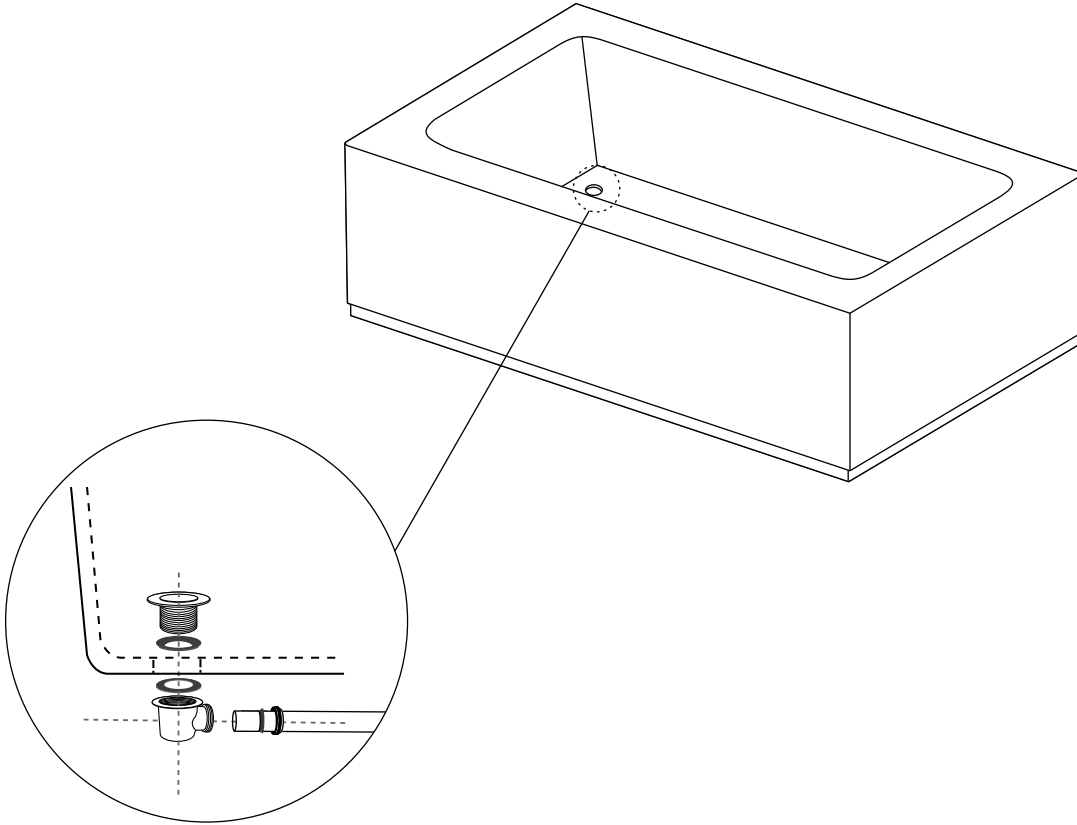


10

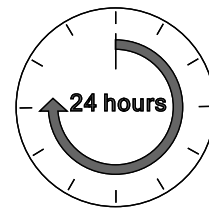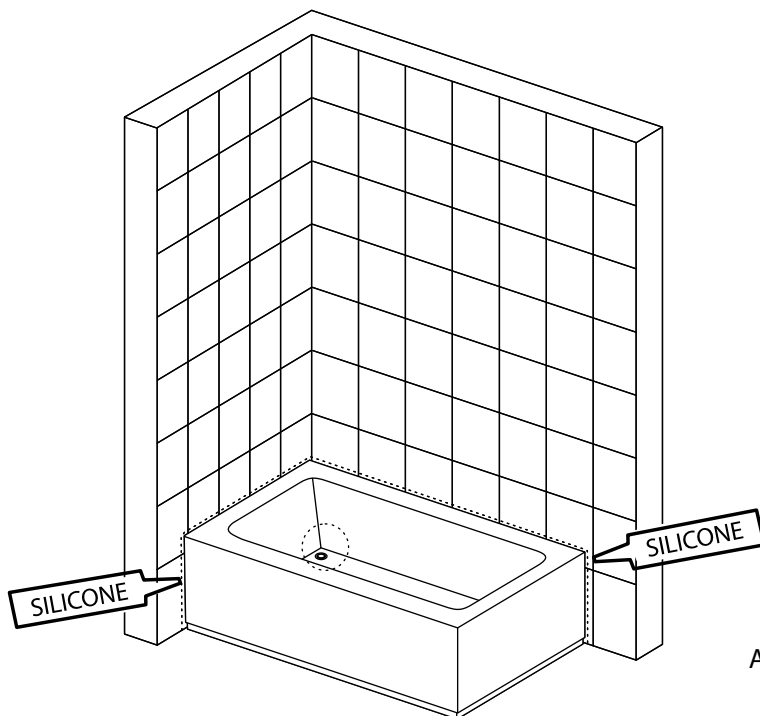

Allow 24 hours for silicone to dry before use.

SINGLE

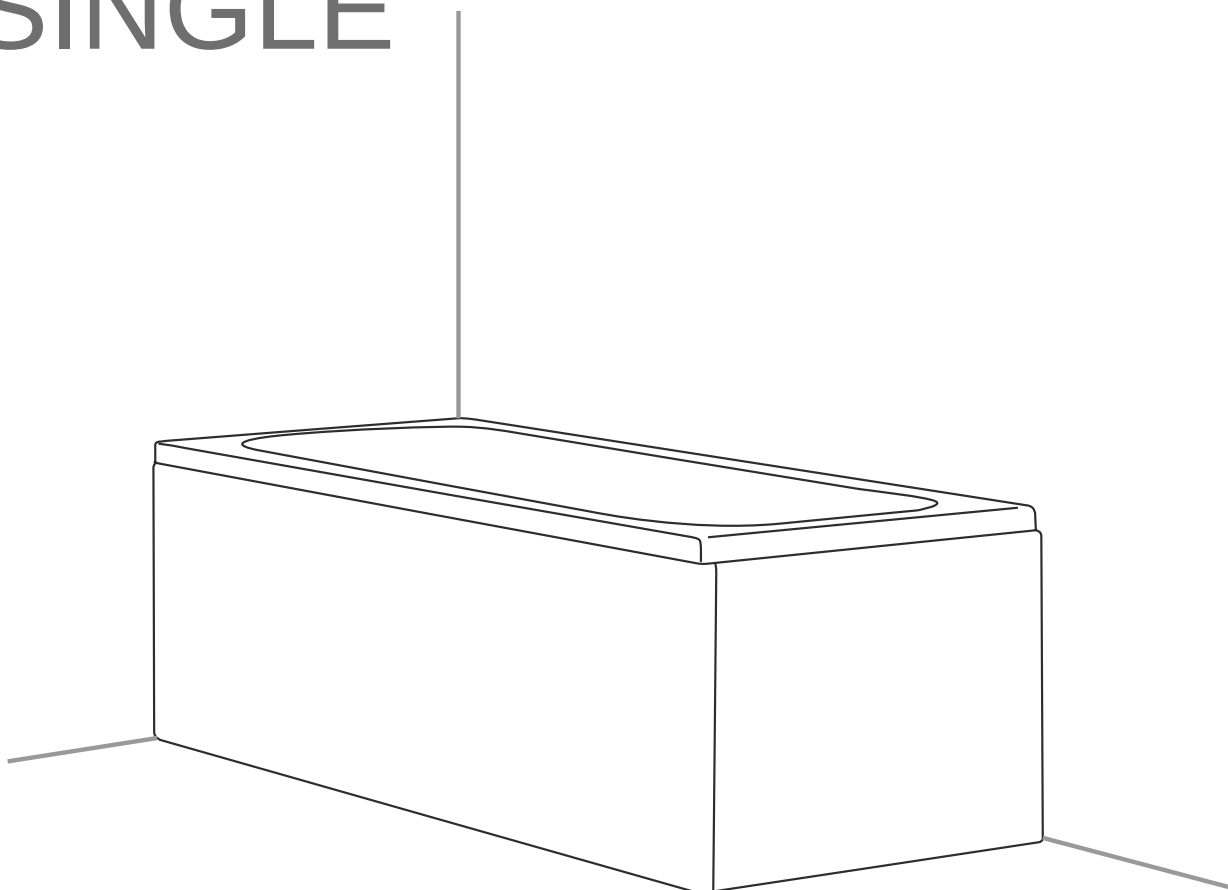

Address:
Montörgatan 7, 2 tr,
S-302 60 Halmstad, Sweden.
+46 (0)35 166430

Noro Scandinavia
Ver.001