



Sauna 280, D 200

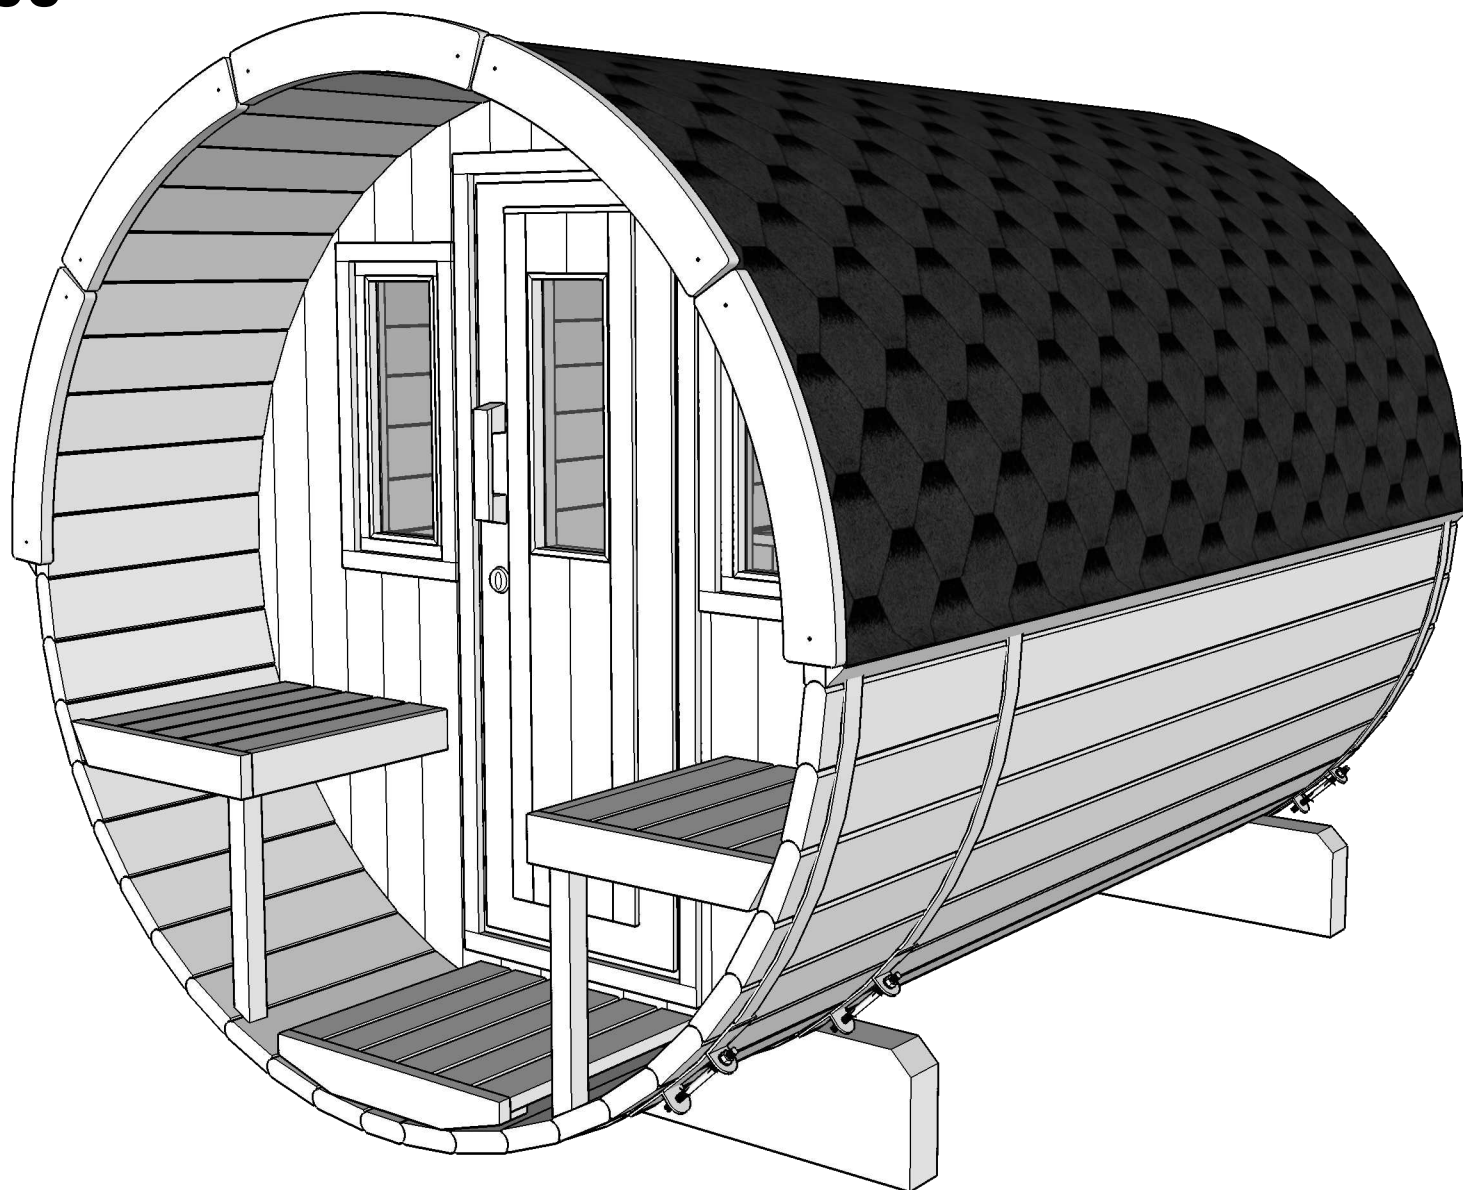


SAUNA 280, D200



Details list nr.1

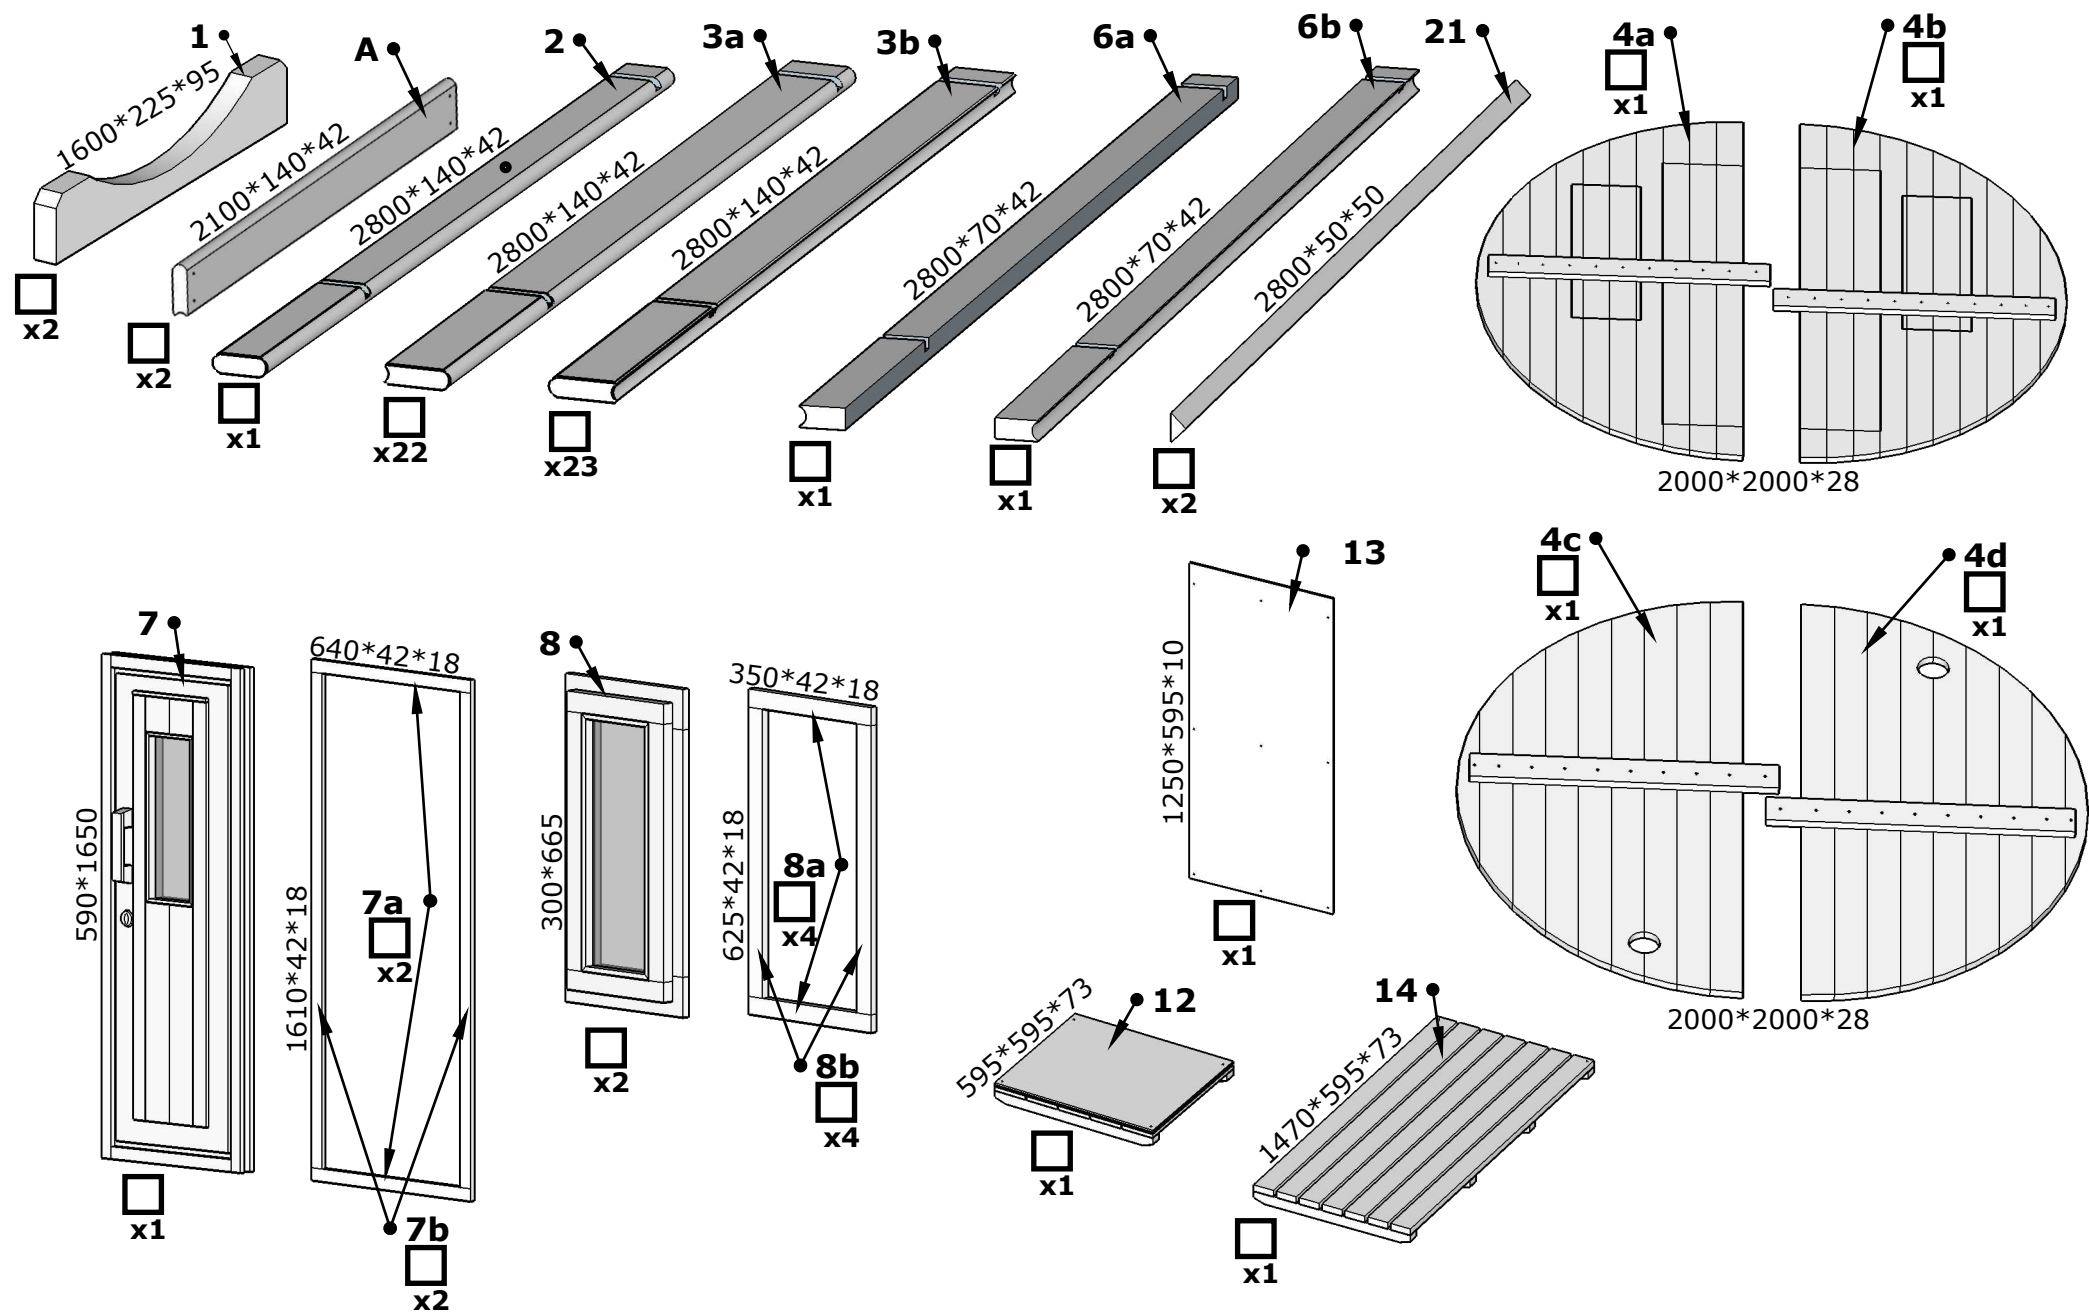

Details list nr.2

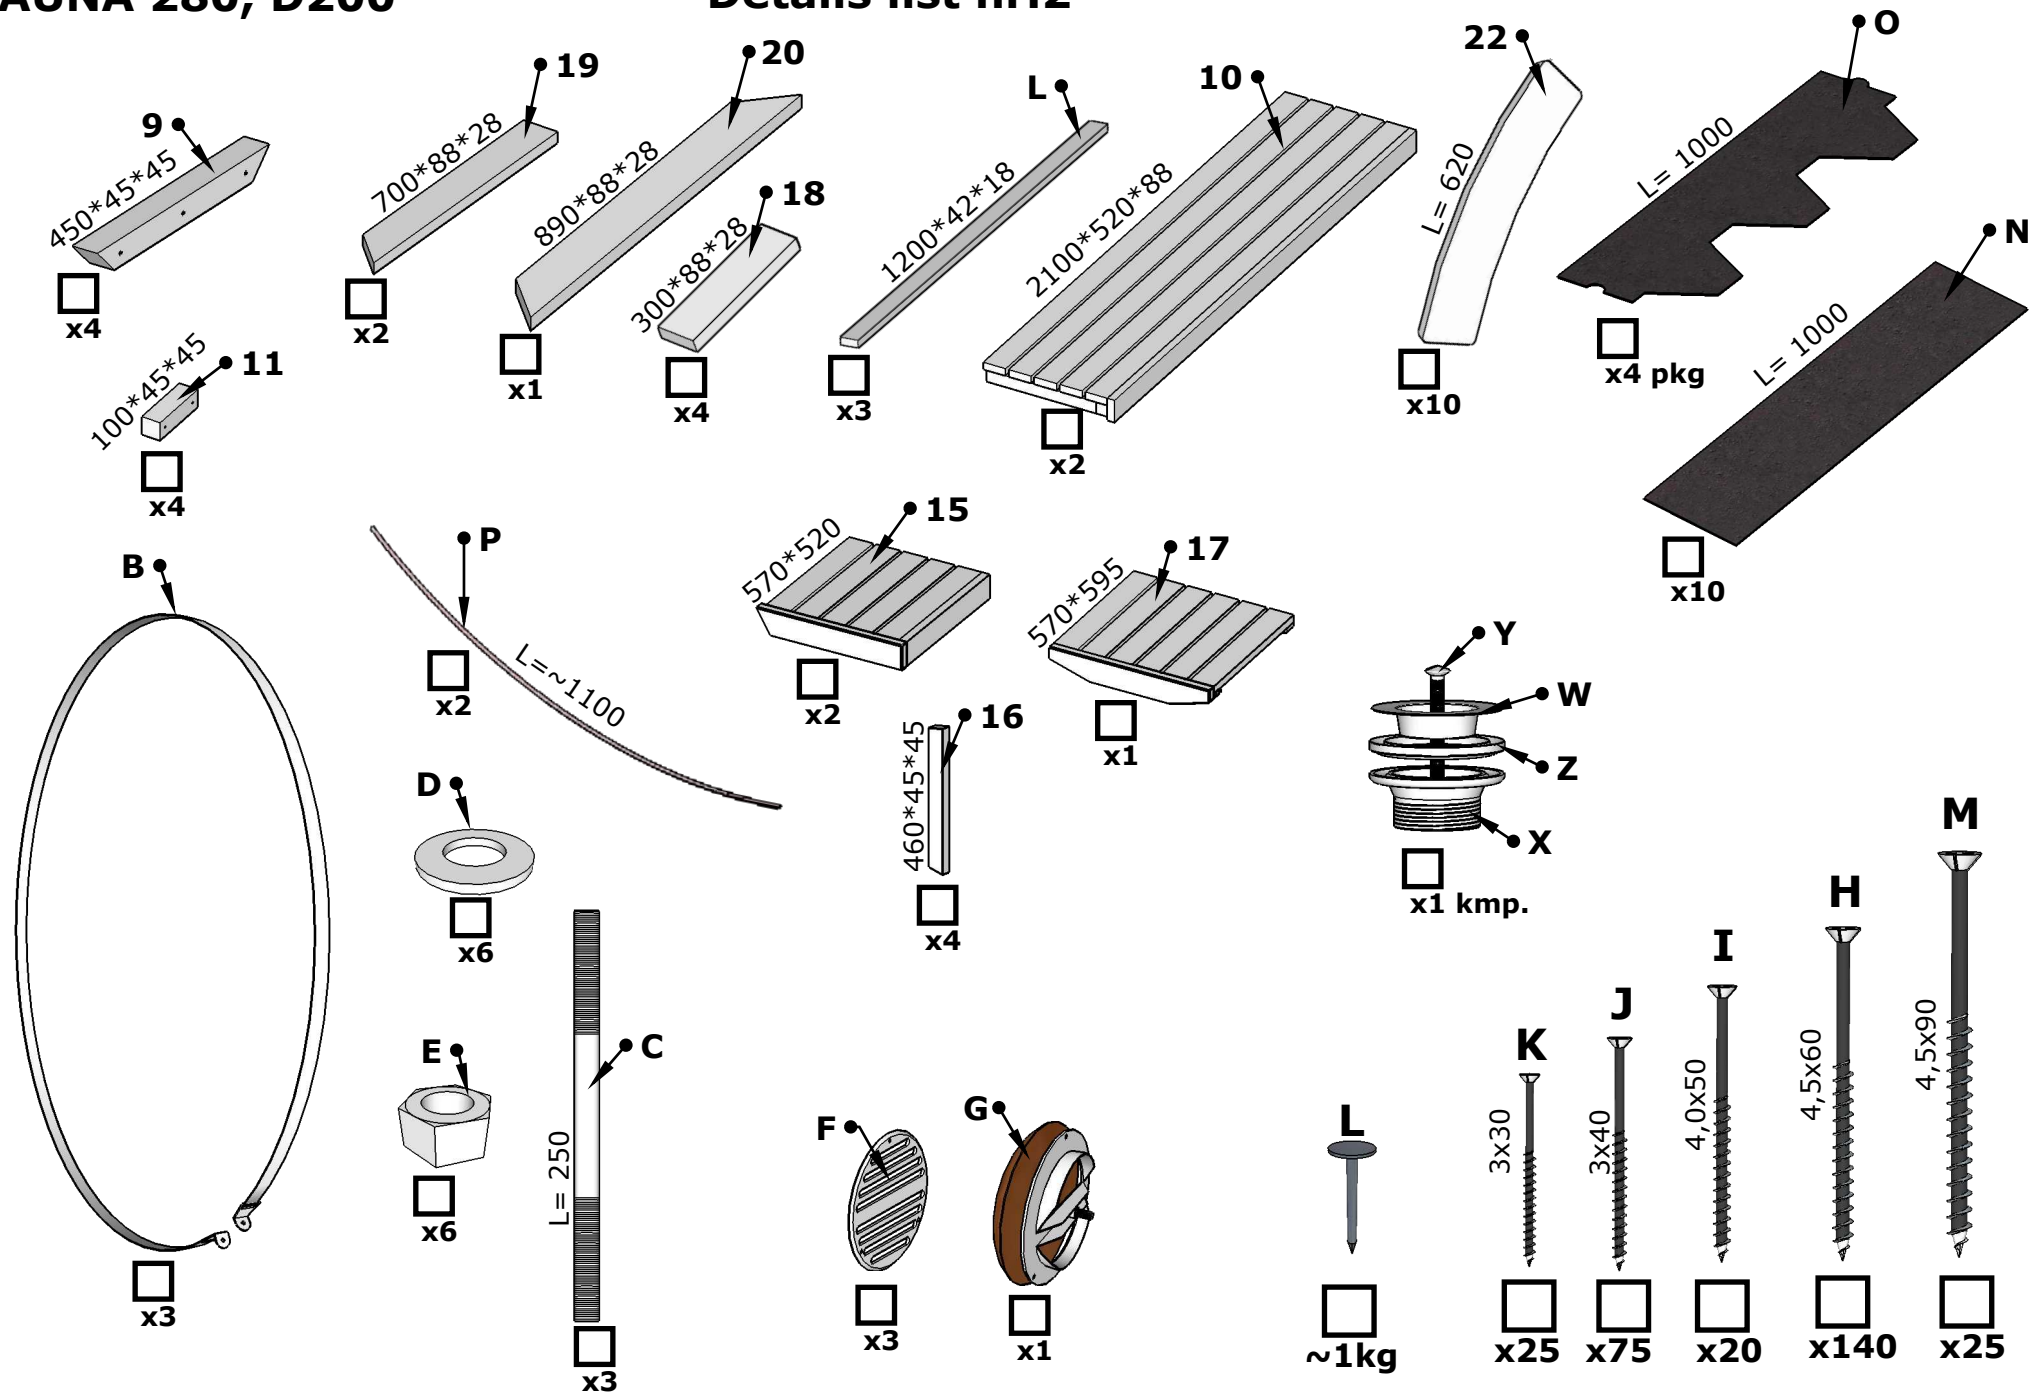


Sauna 280, D 200

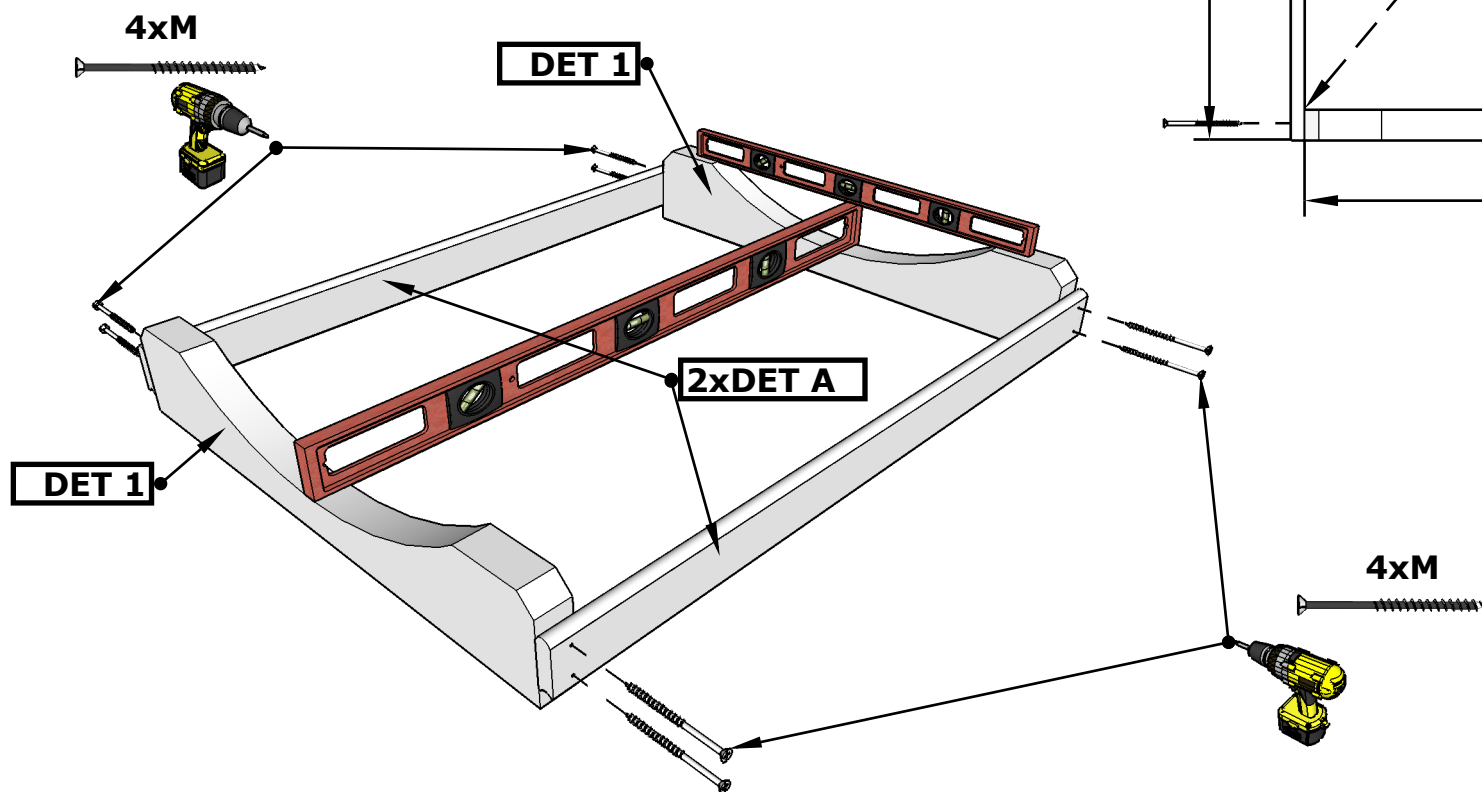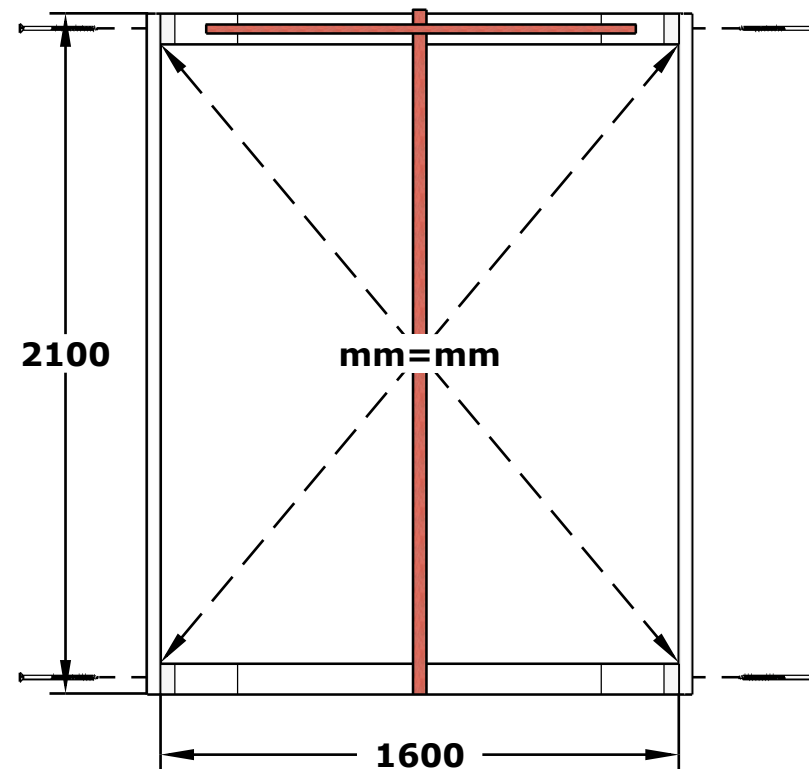




1.

Sauna 280, D 200

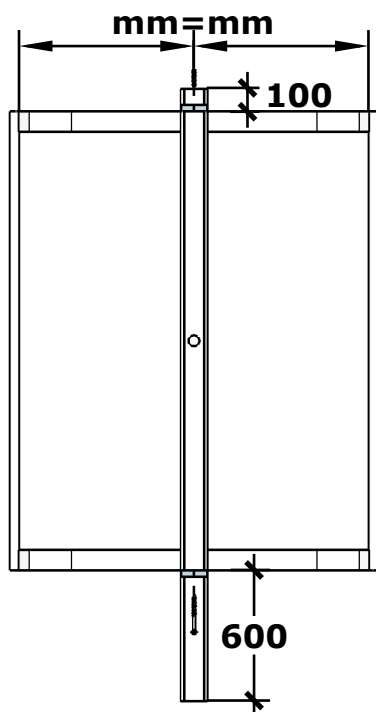



4 x DET 3a
4 x DET 3b

II

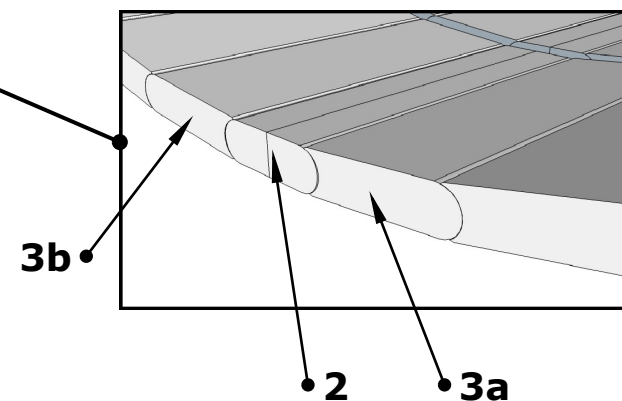
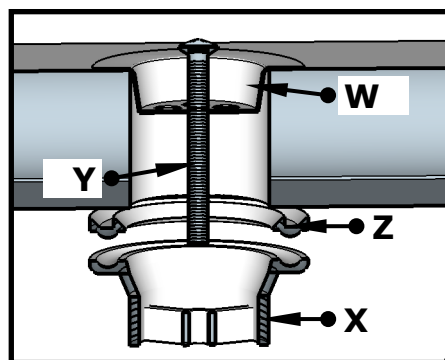
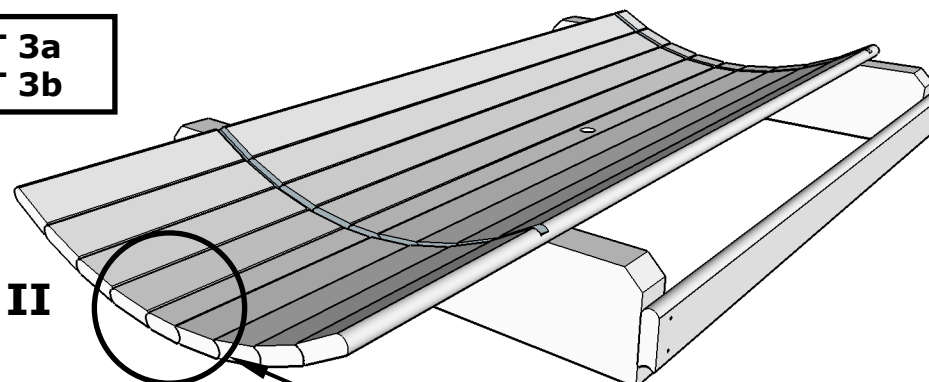


1x DET 2


I

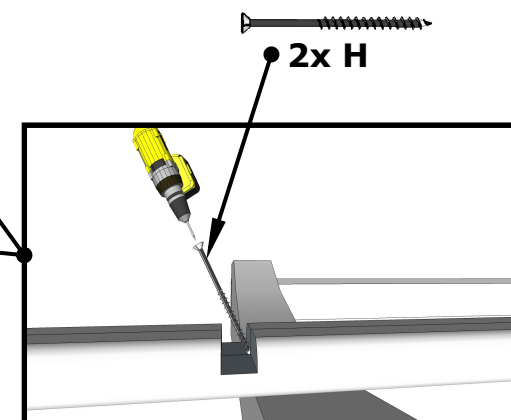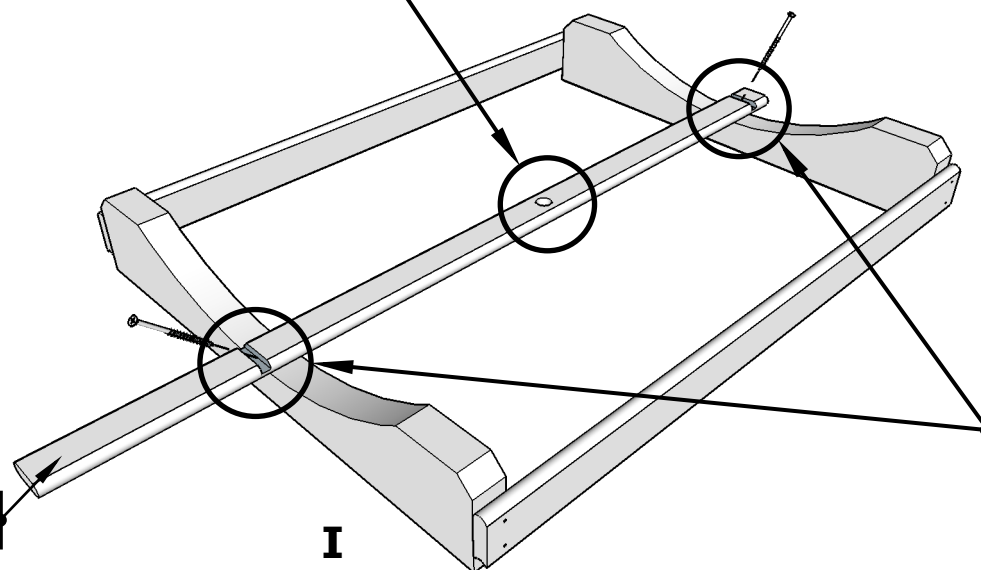



Sauna 280, D 200

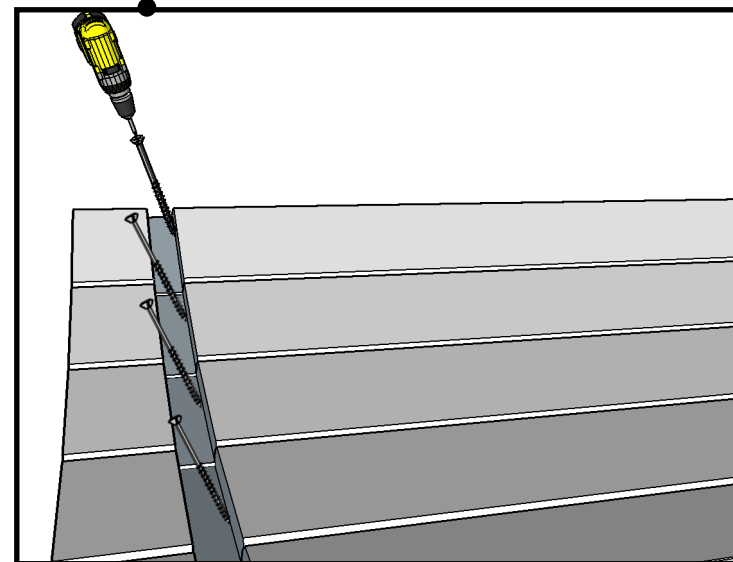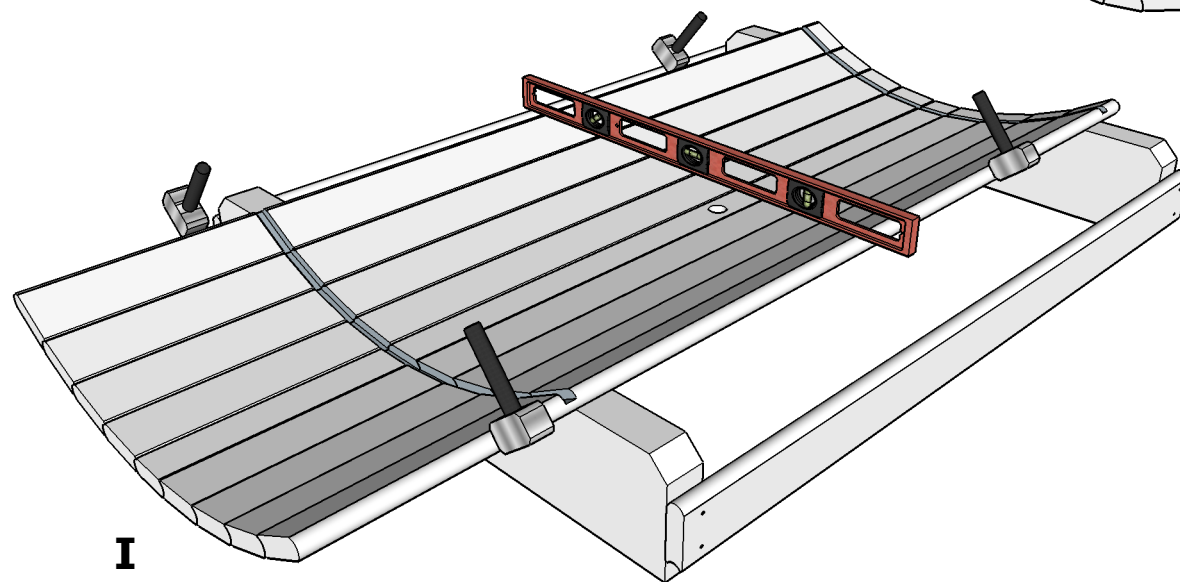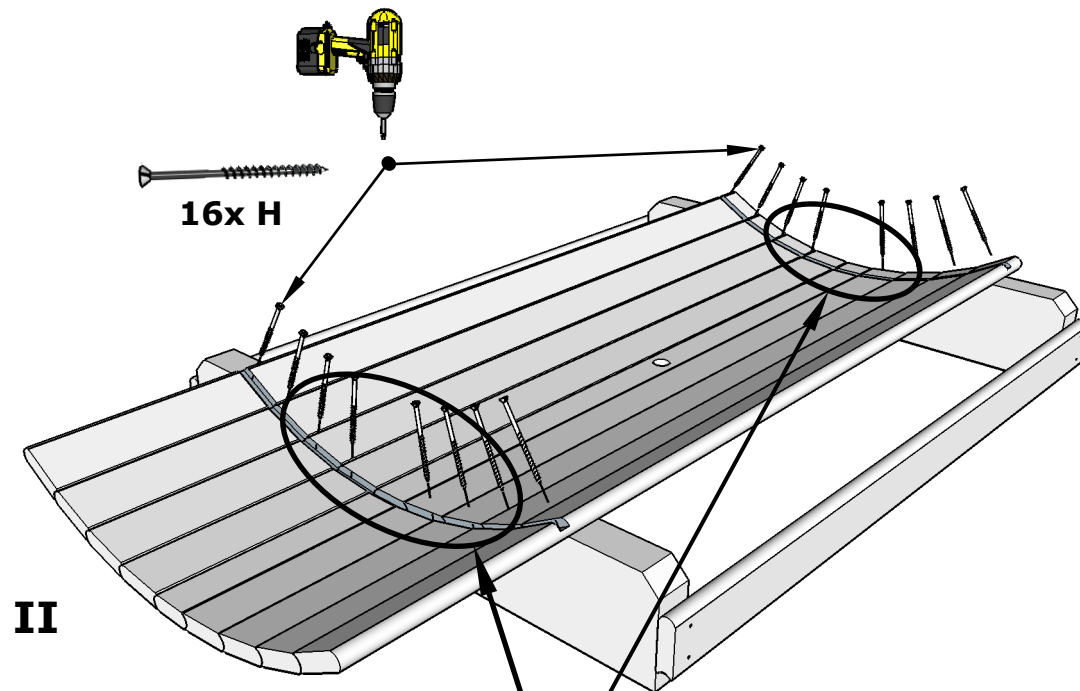




Sauna 280, D 200

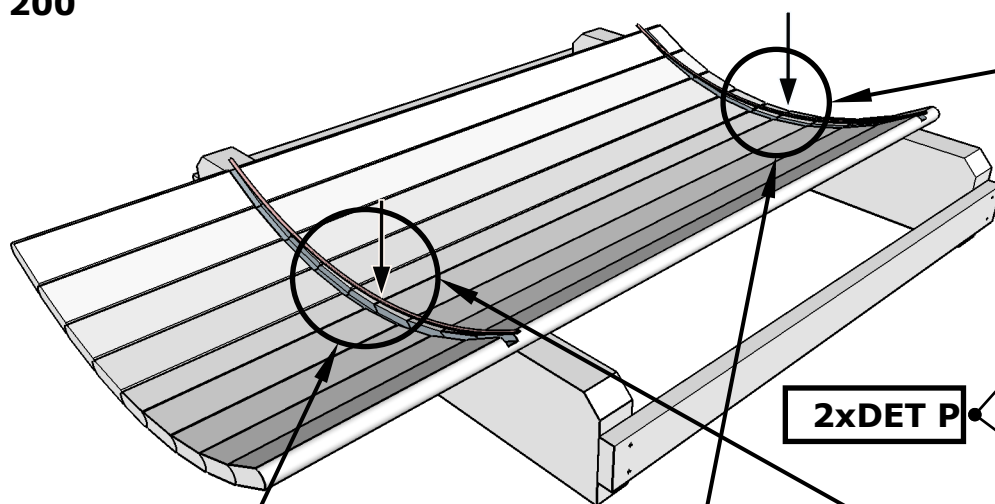

2xDET P

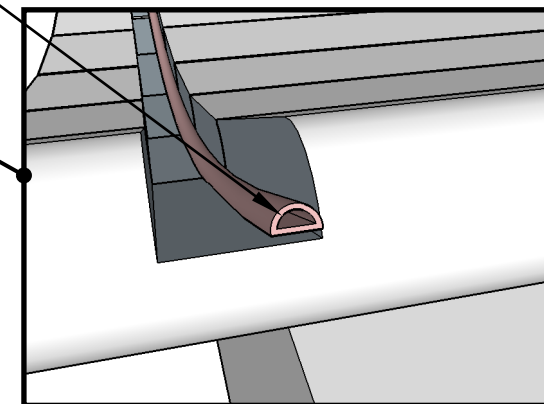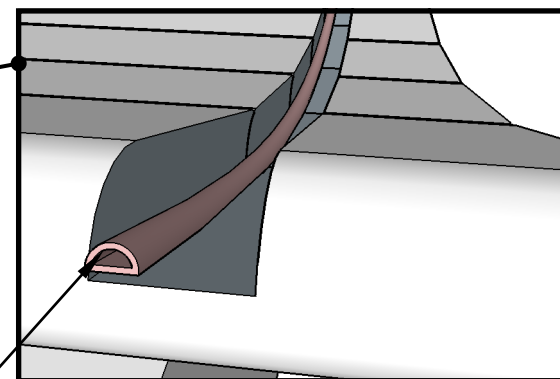


Drill 4 holes
in DET 2 Ø10 mm

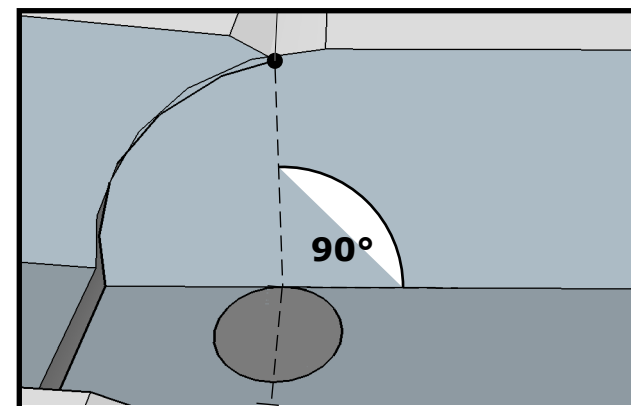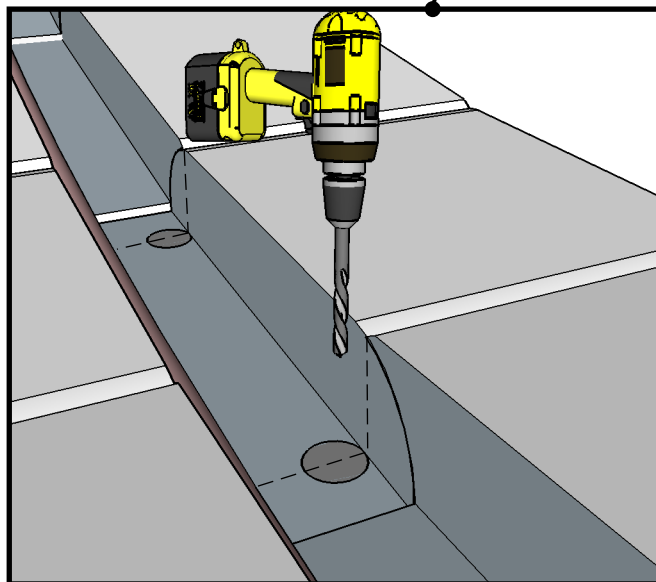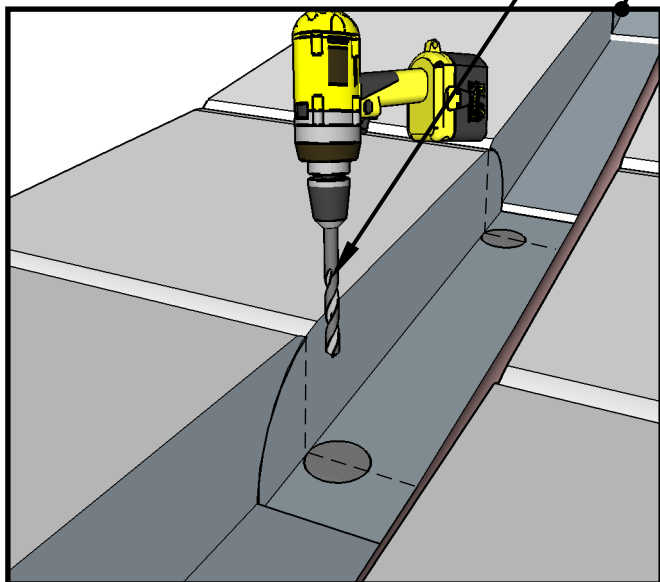



3A.

Sauna 280, D 200

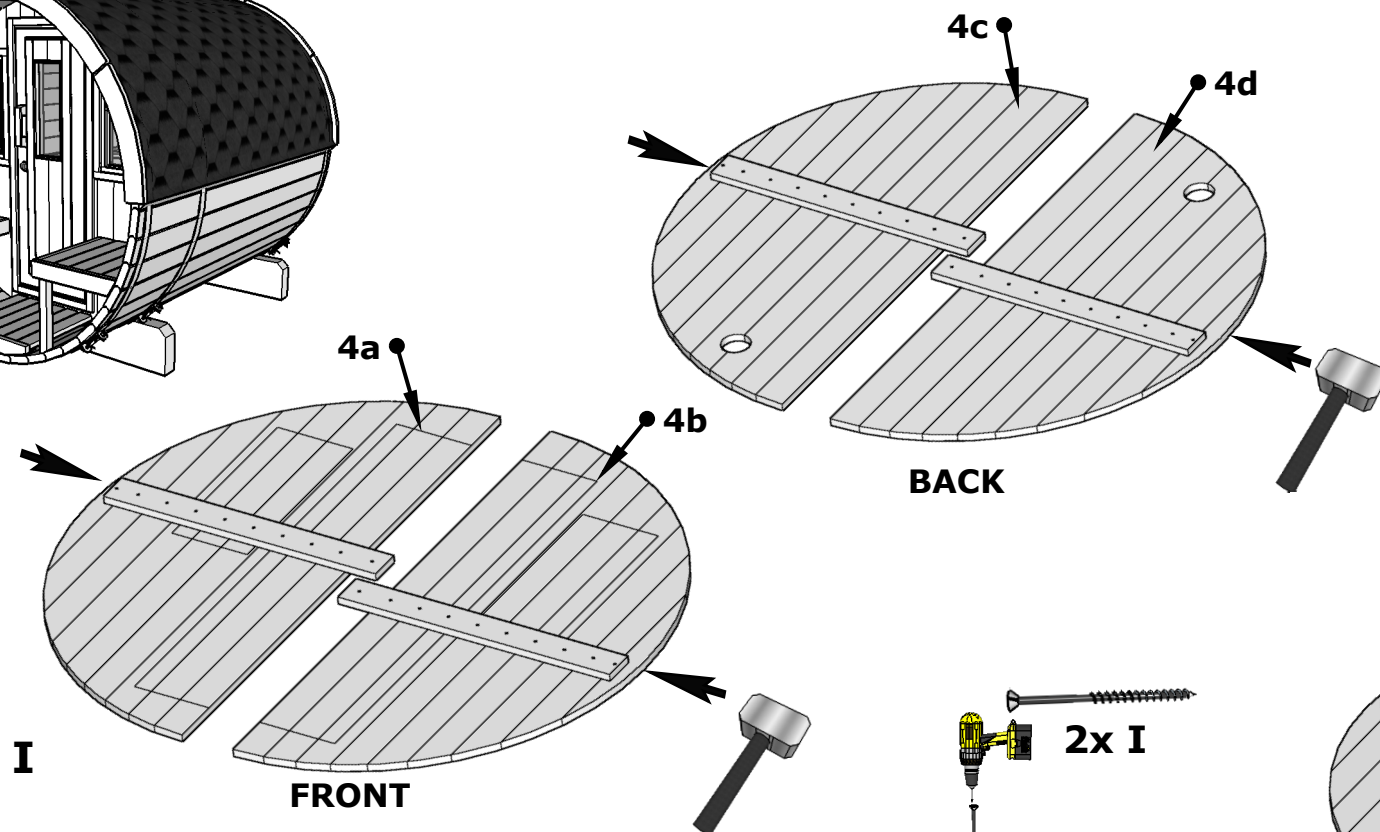


4xDET 4

II

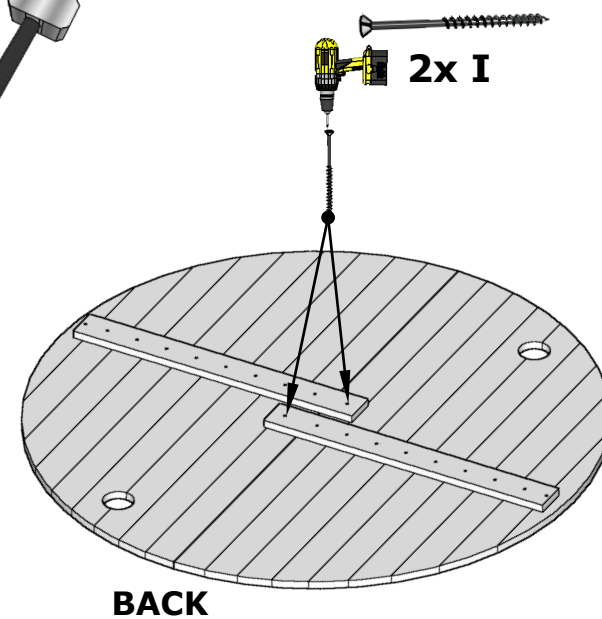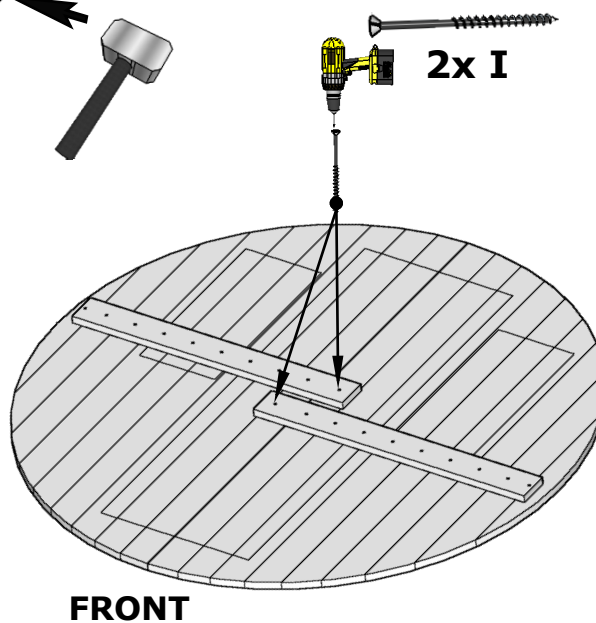

Sauna 280, D 200

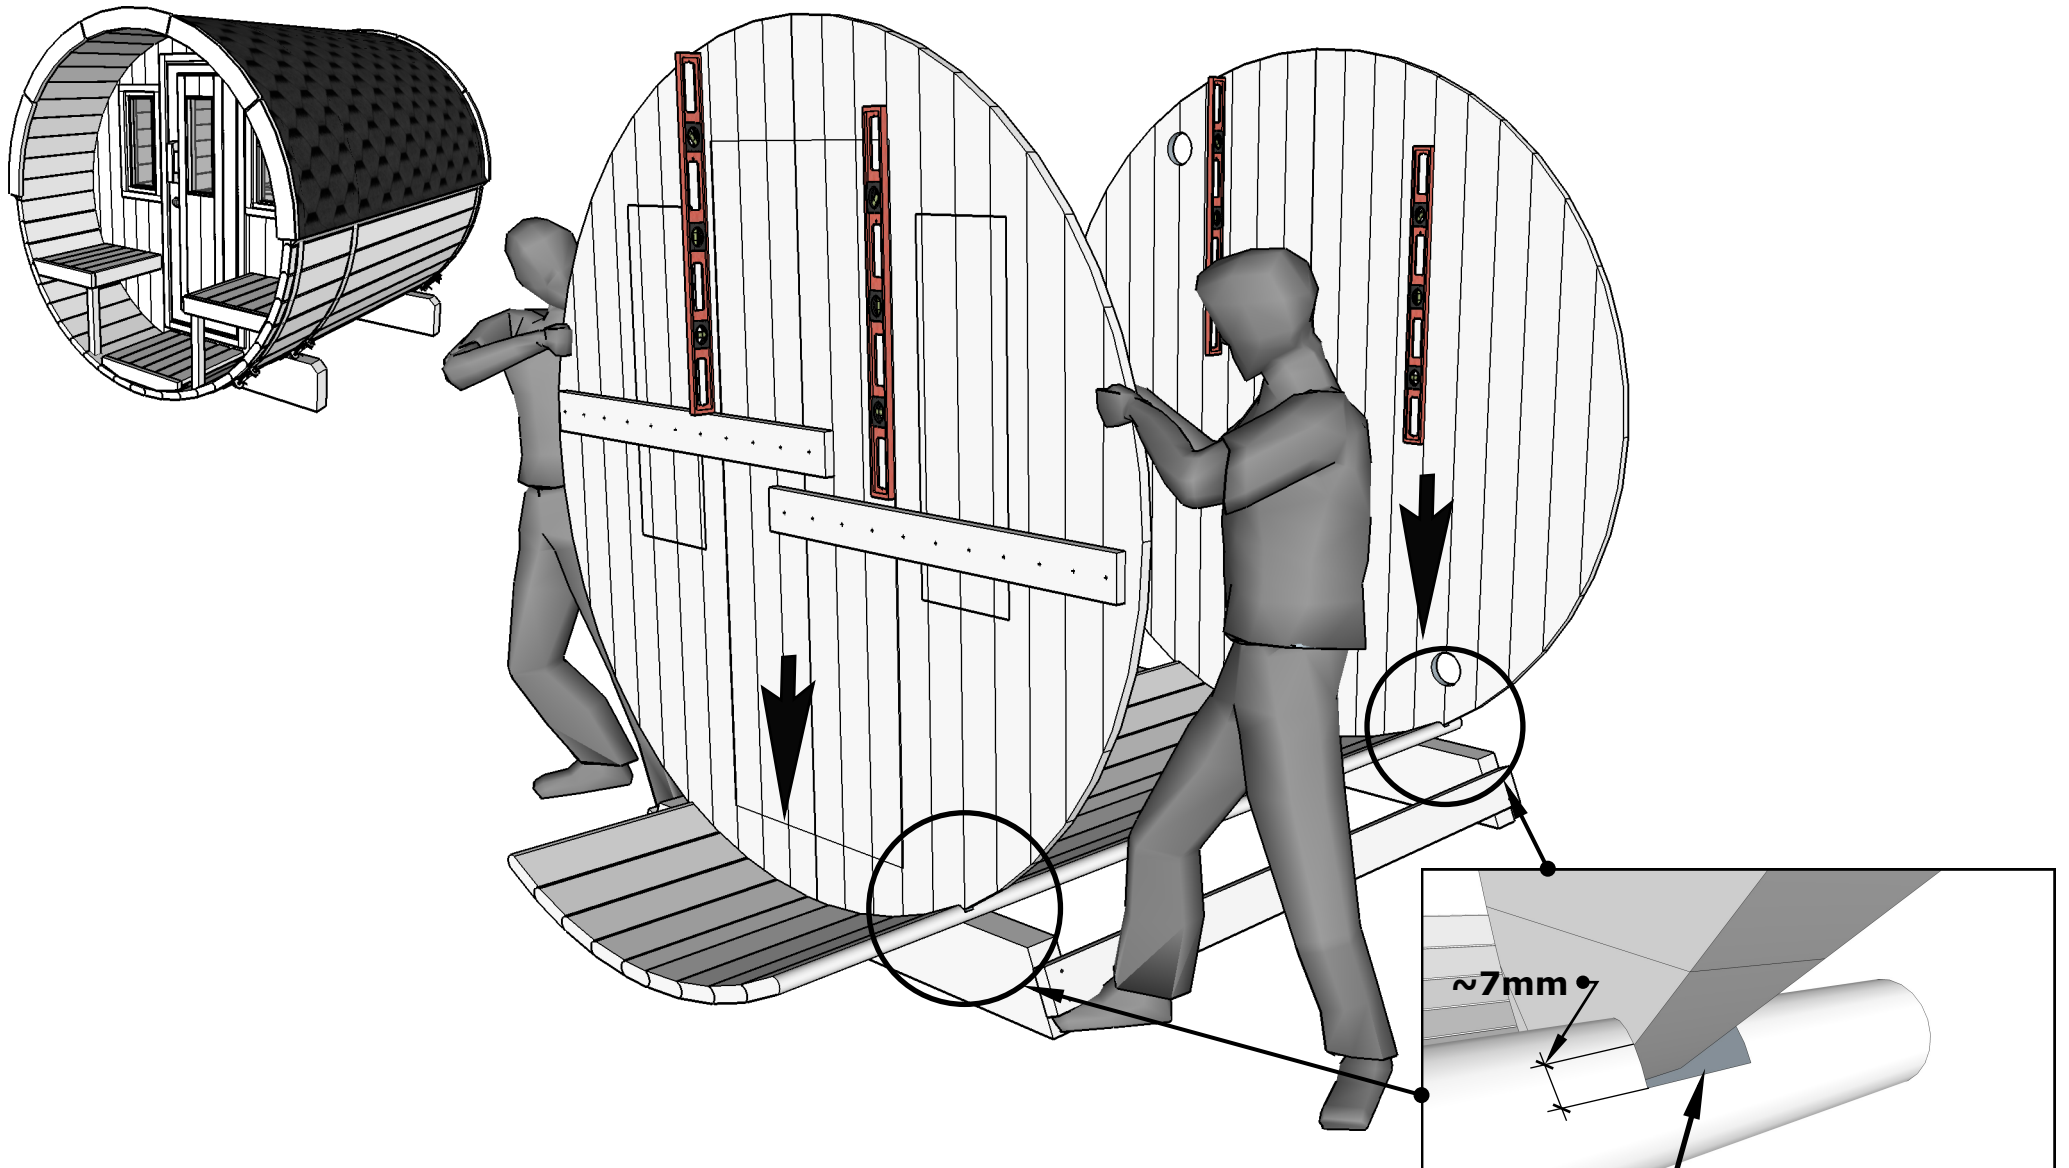


**NB!!! No spacing
on thermal wood!!!**

5.


Sauna 280, D 200

Watch Page 6A

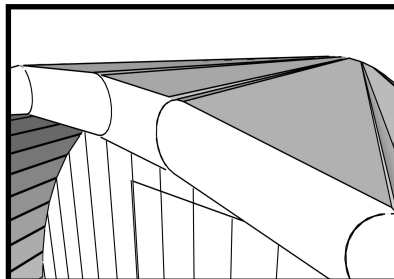


11x DET 3b
10x DET 3a

1x DET 6b

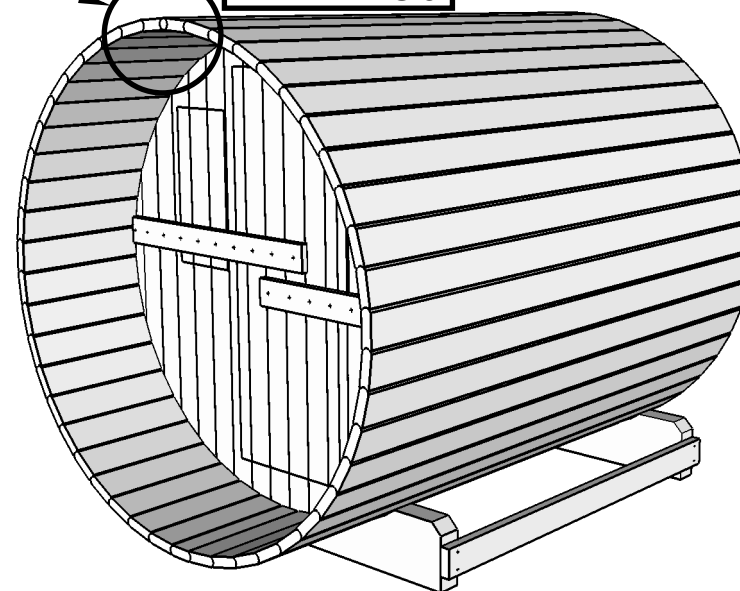


II

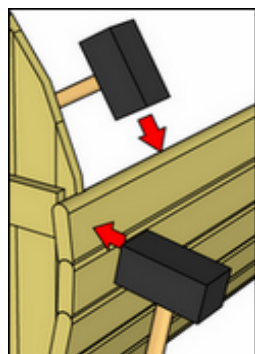

8x DET 3a
8x DET 3b

16xH

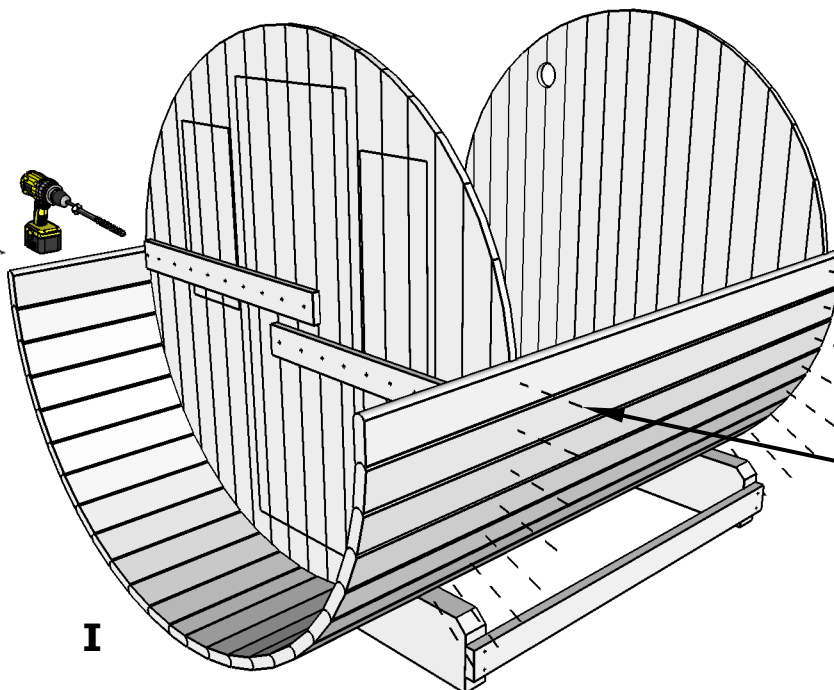

I


16xH

6.



Sauna 280, D 200




Important!!!

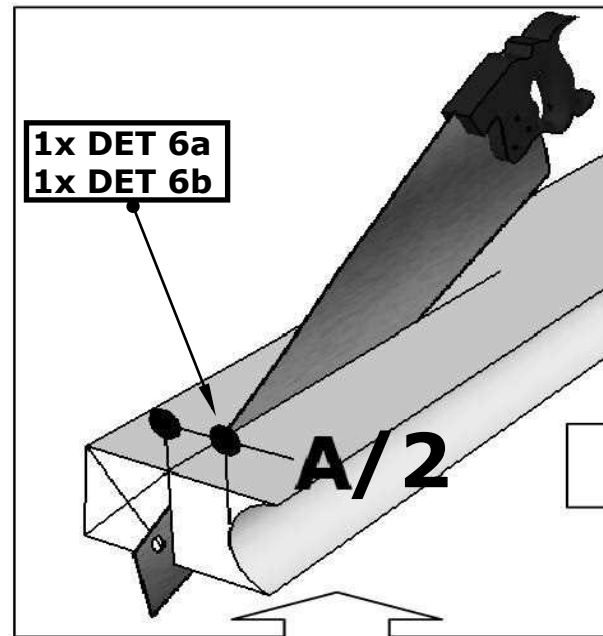



Use glue between boards.

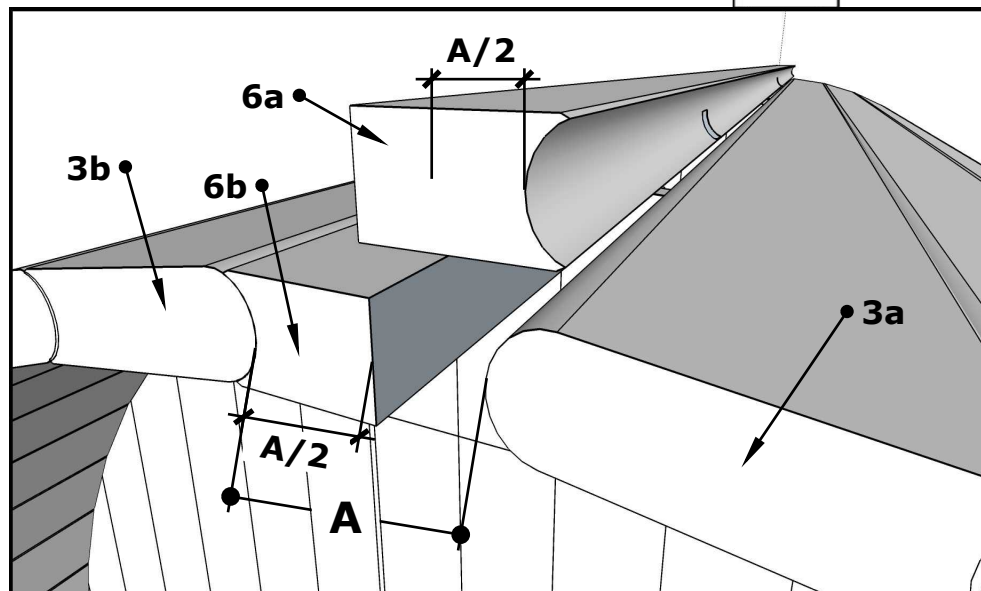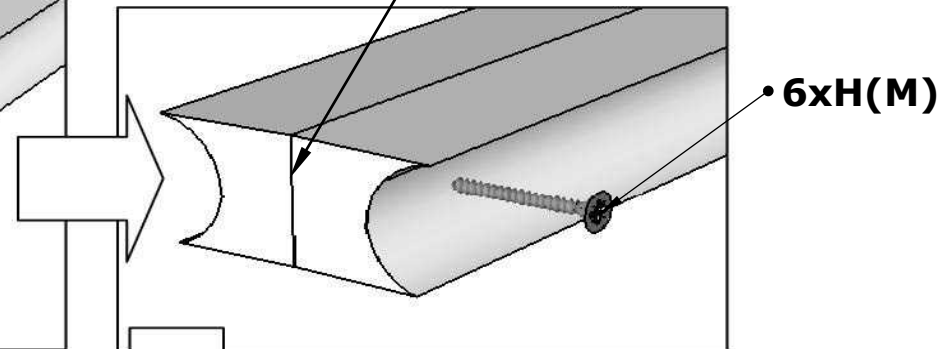


6A.

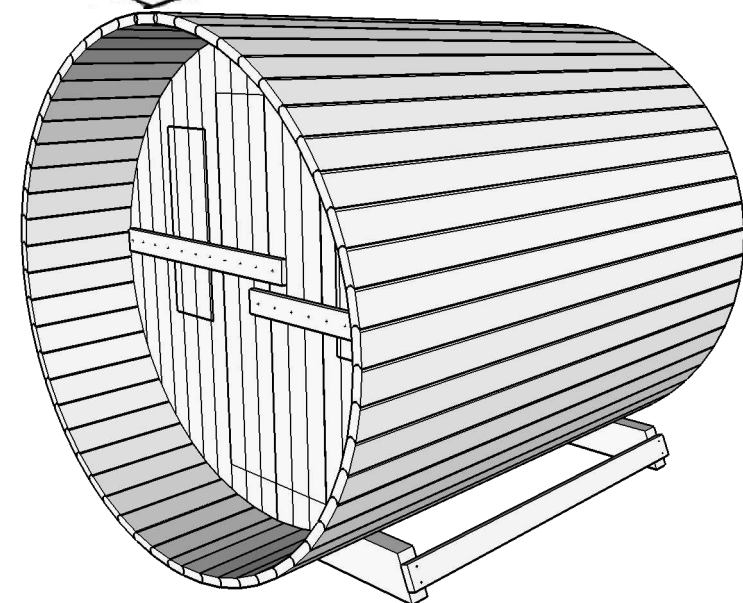

Sauna 280, D 200

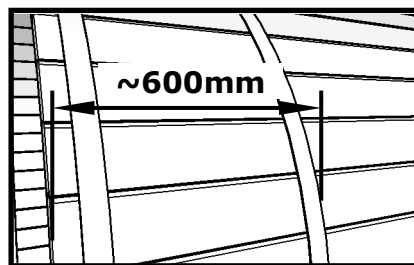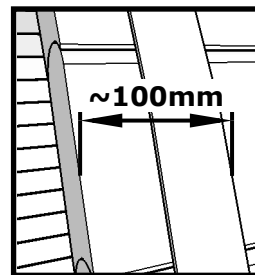


3xDET B

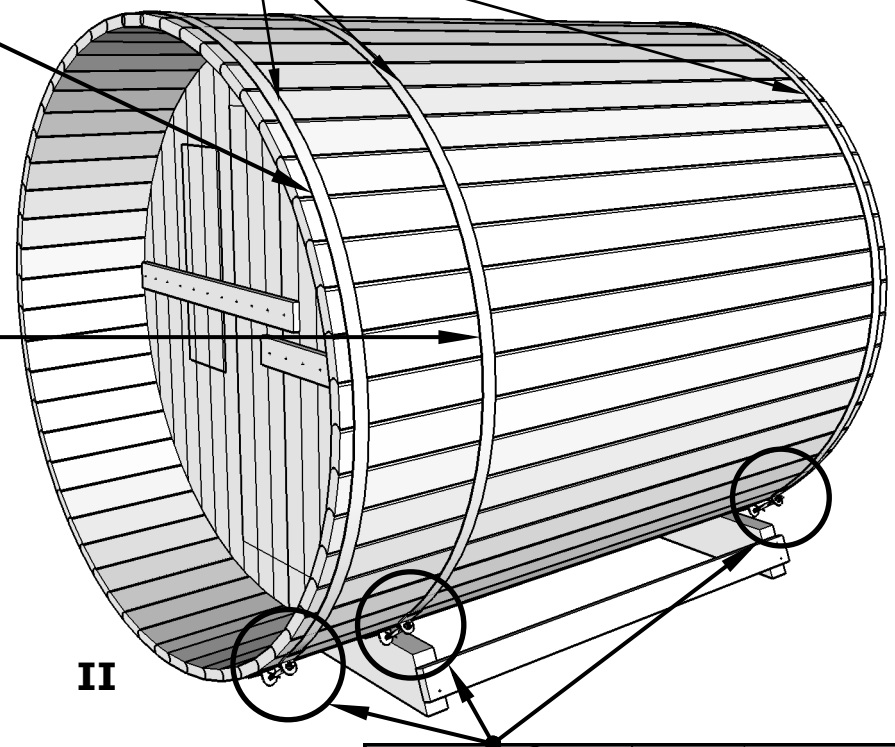

II


 REMOVE
SCREWS

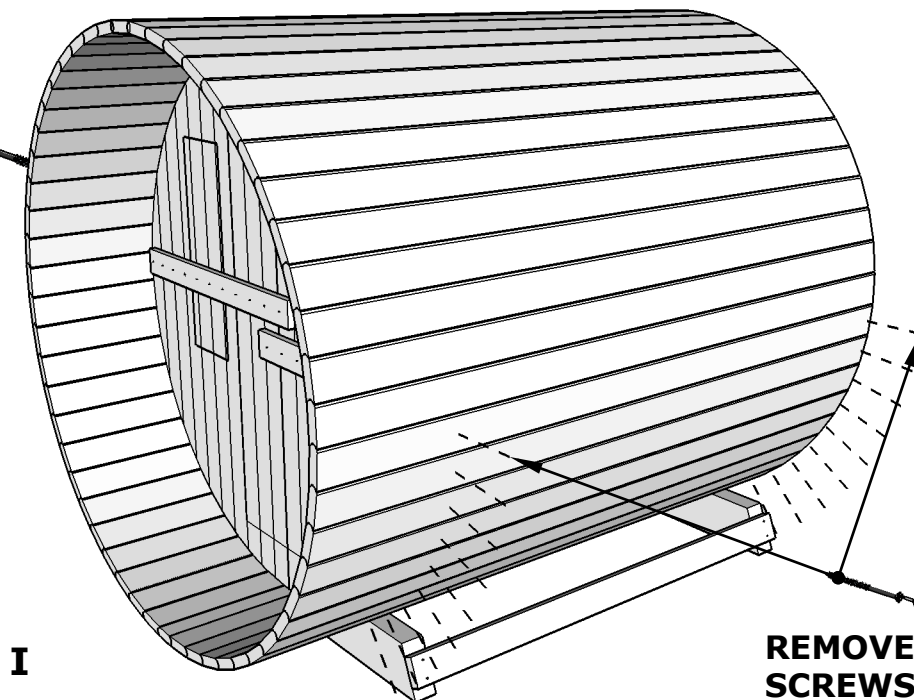


I

REMOVE
SCREWS 



DET E
DET D
DET C

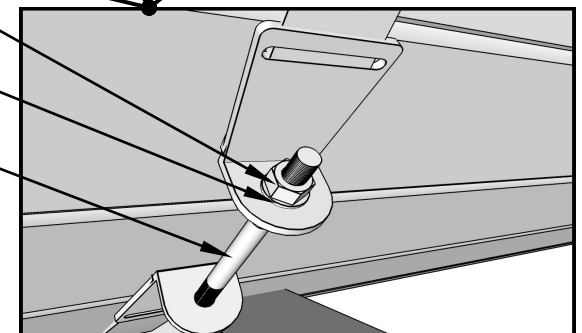


NB! Don't remove
screws, if using
thermal wood!!!

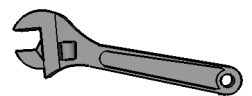


Sauna 280, D 200

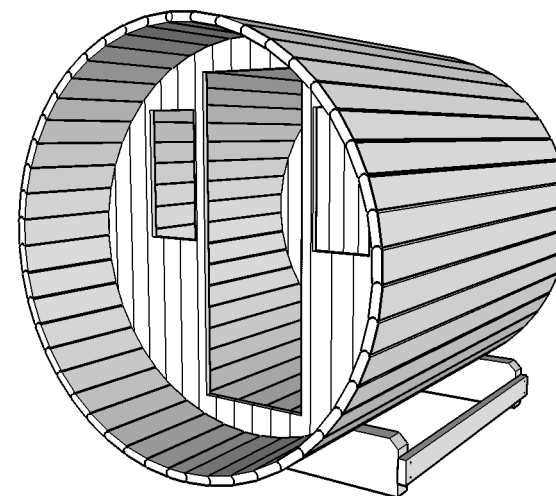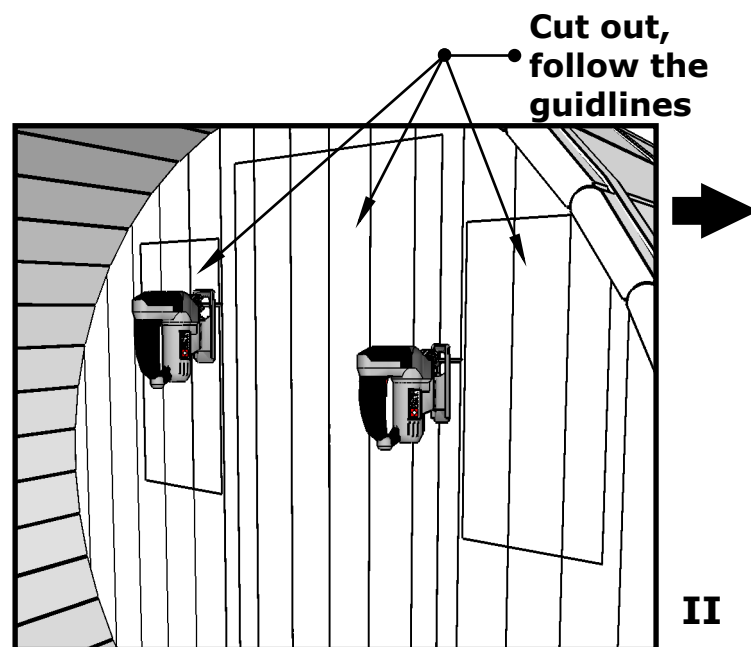

Remove
brackets

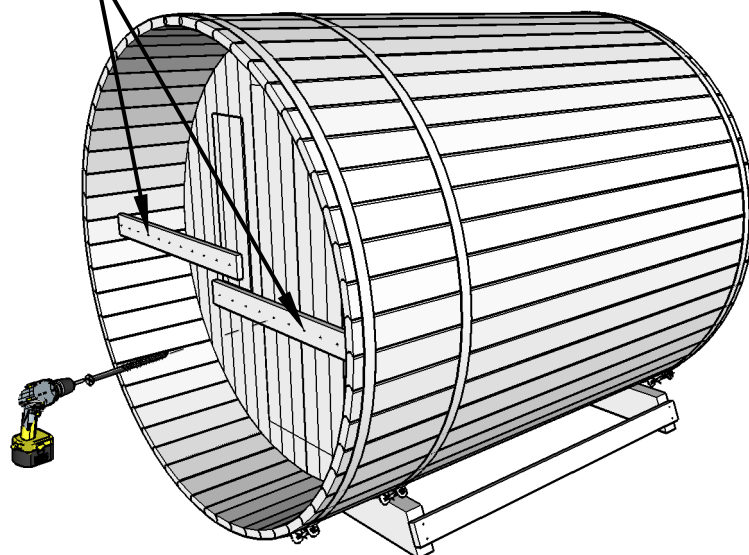

Remove
brackets

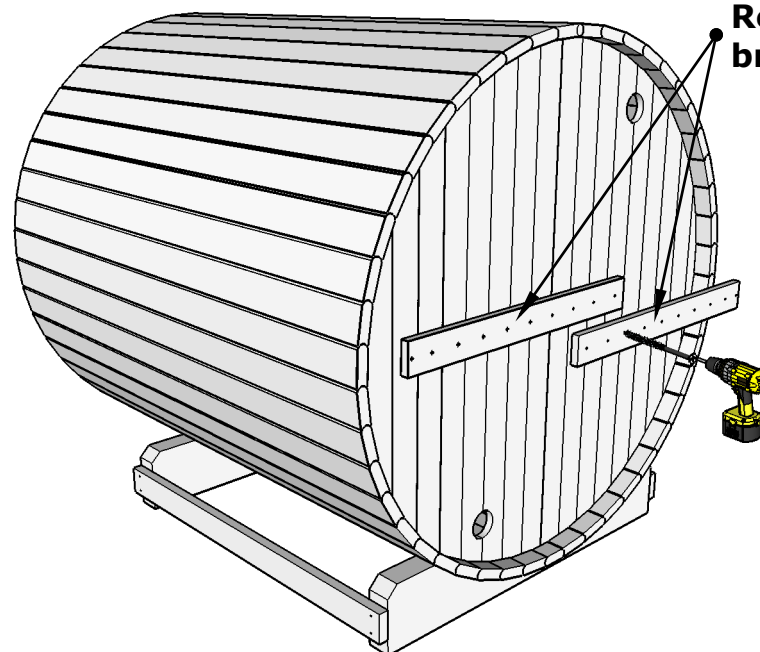

I


Sauna 280, D 200



Use level to
install windows.



10x J

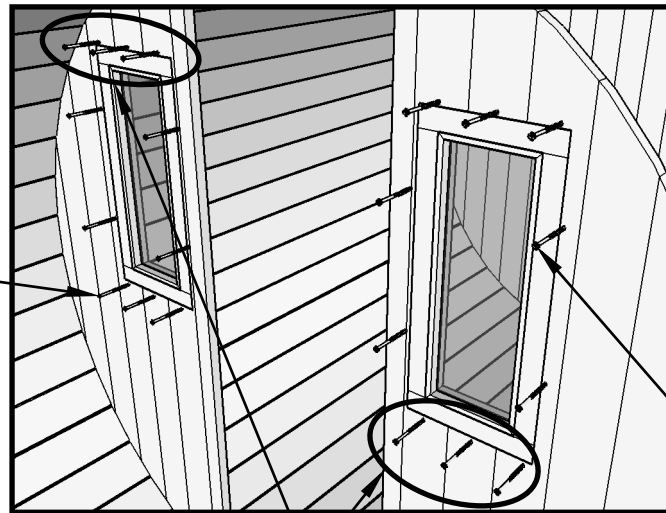


II


NB! Horizontally fix screw
in every board!!!



10x J

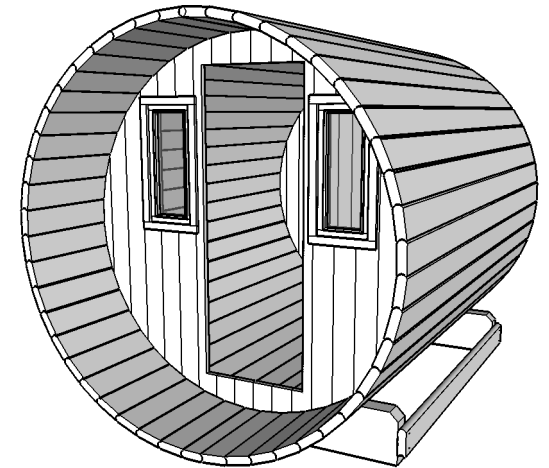

IV

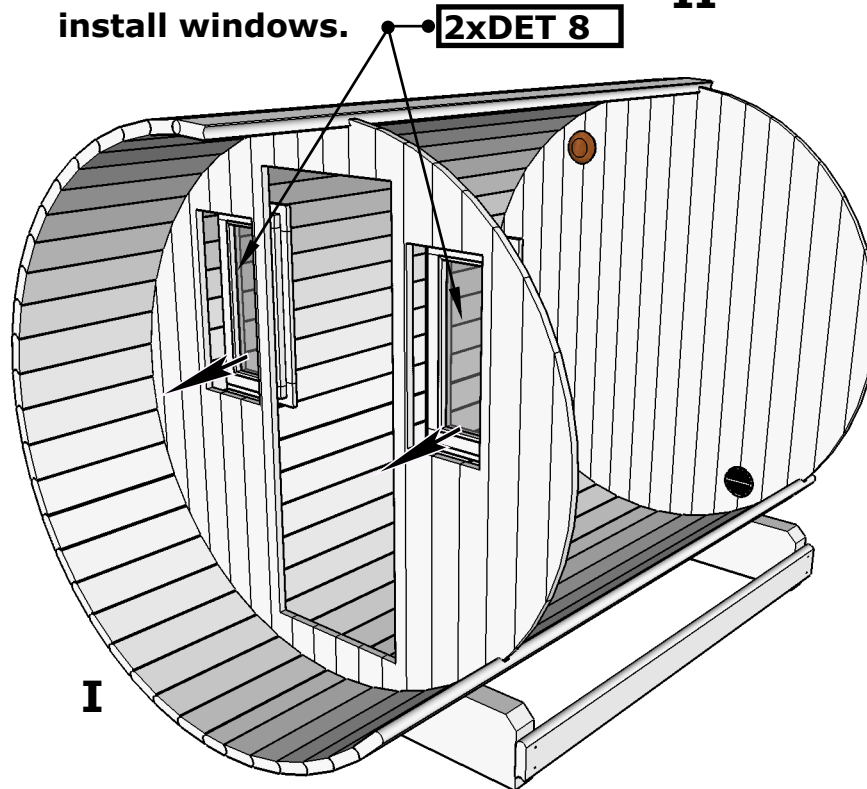

I

2xDET 8




20x J



III

4xDET 8a
4xDET 8b

Sauna 280, D 200



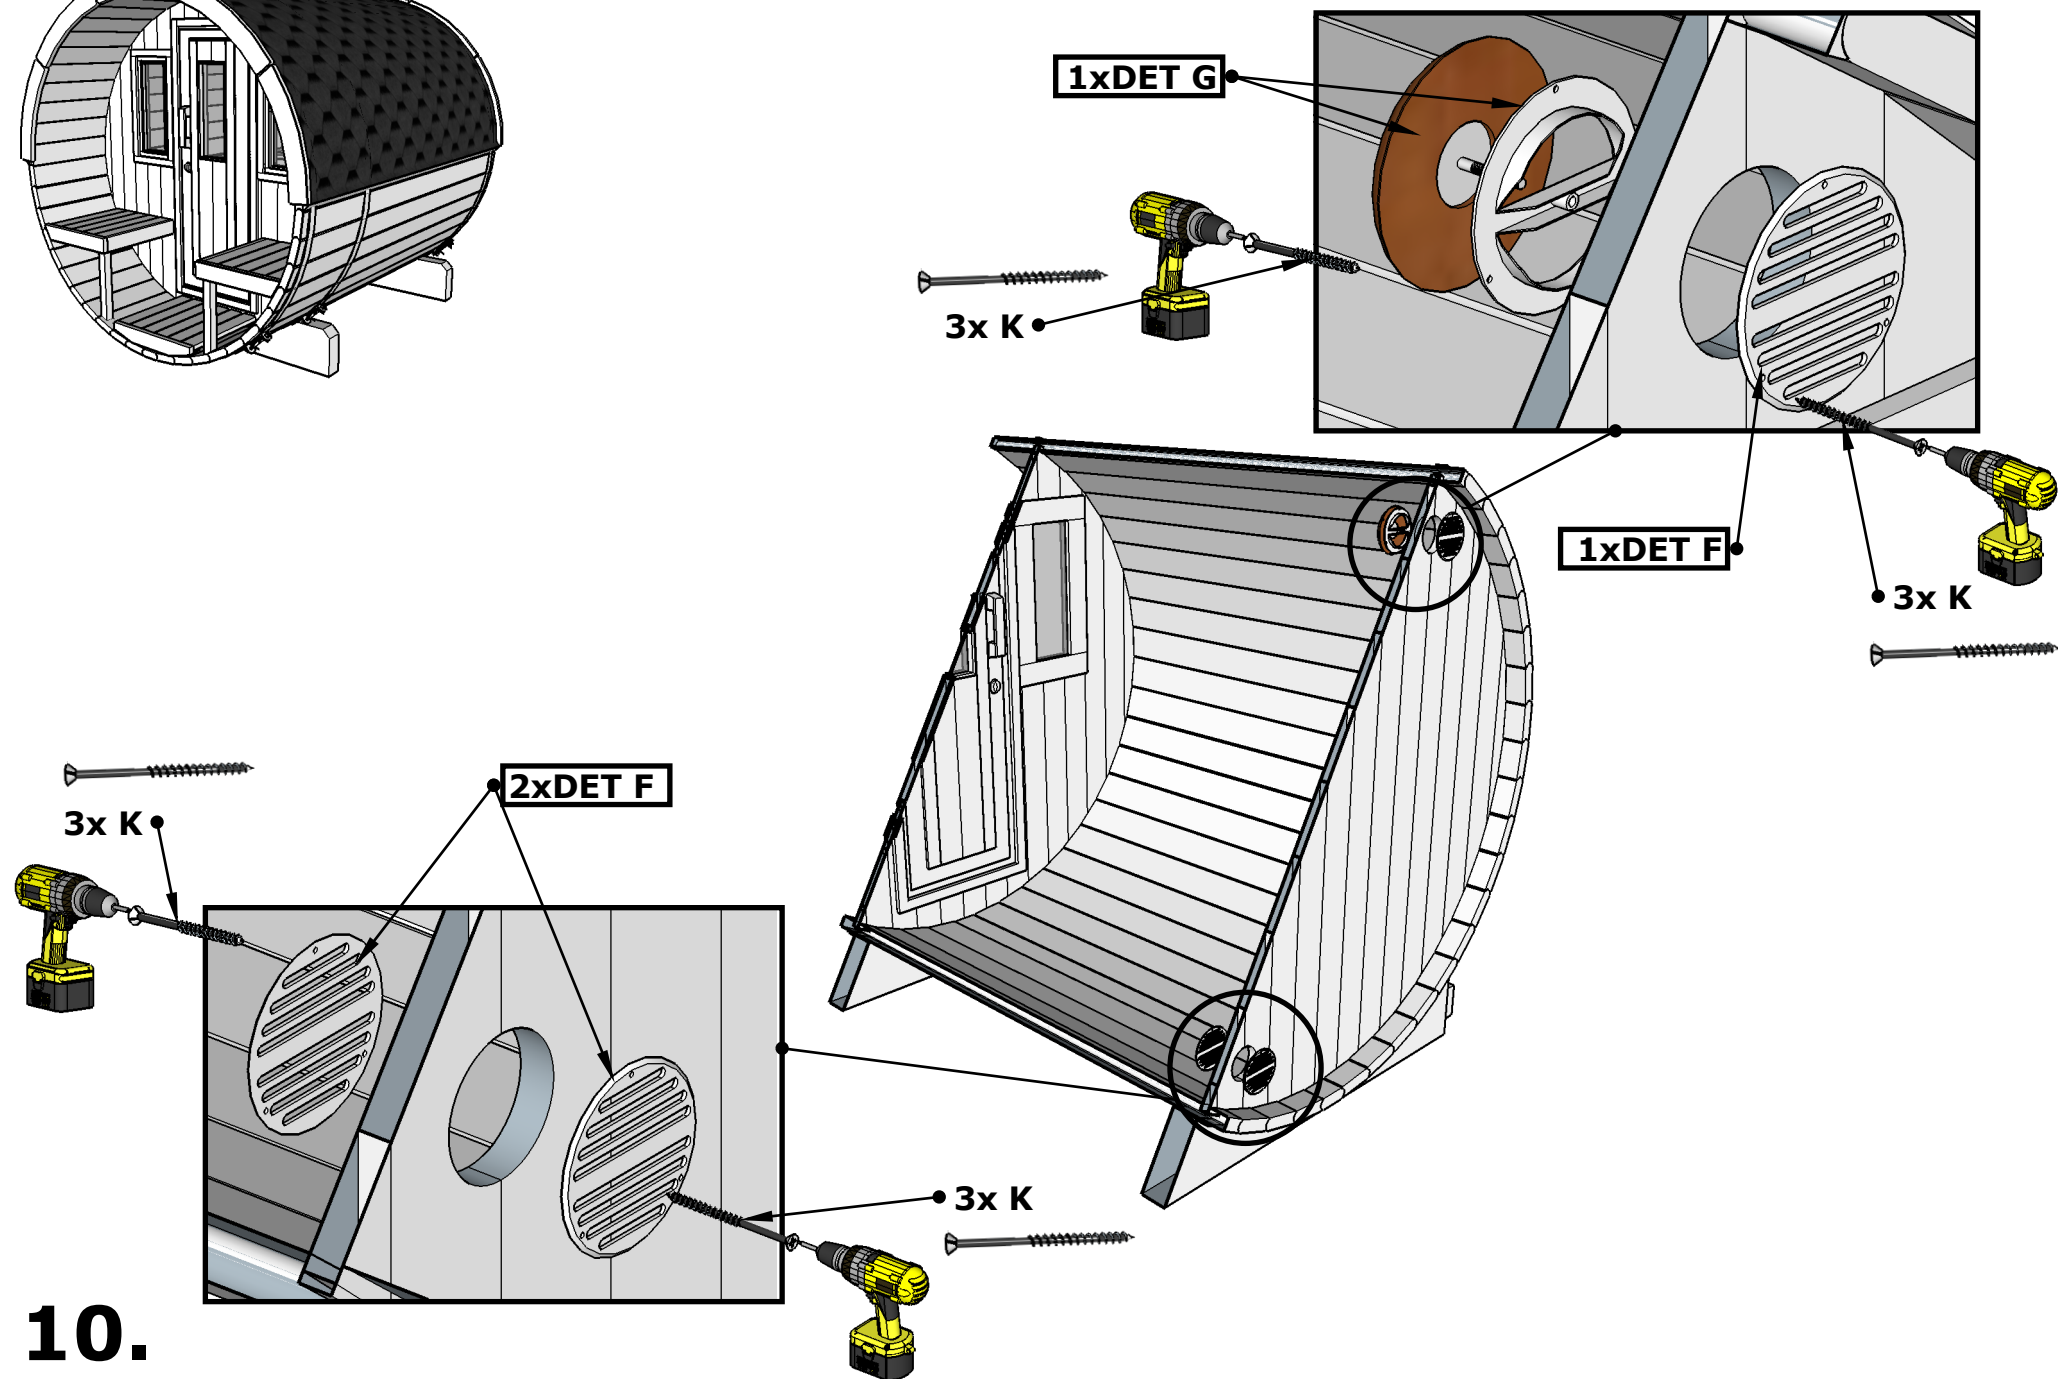


10.

Sauna 280, D 200




III

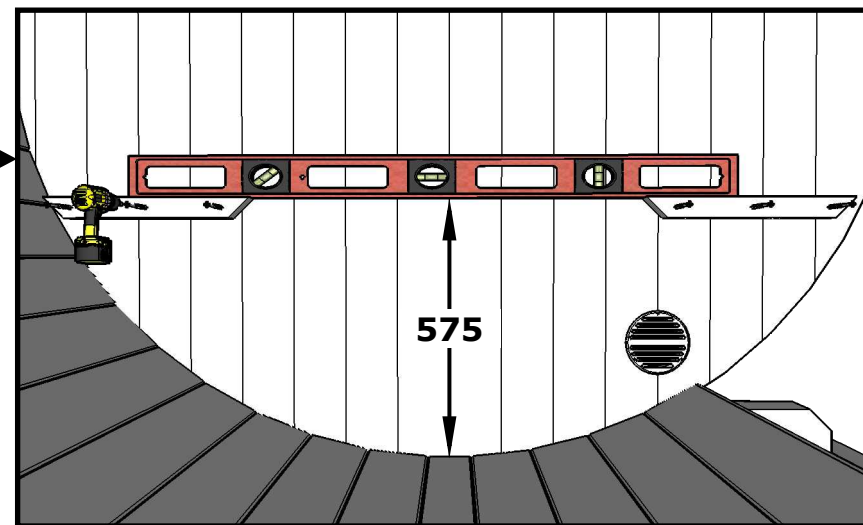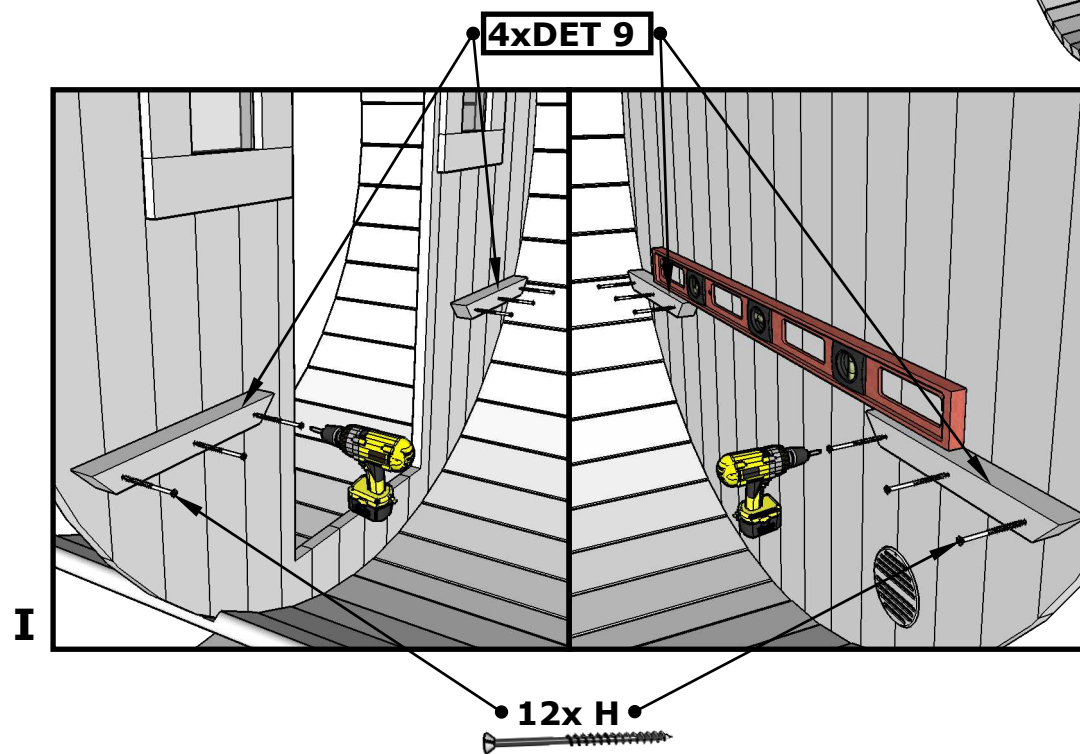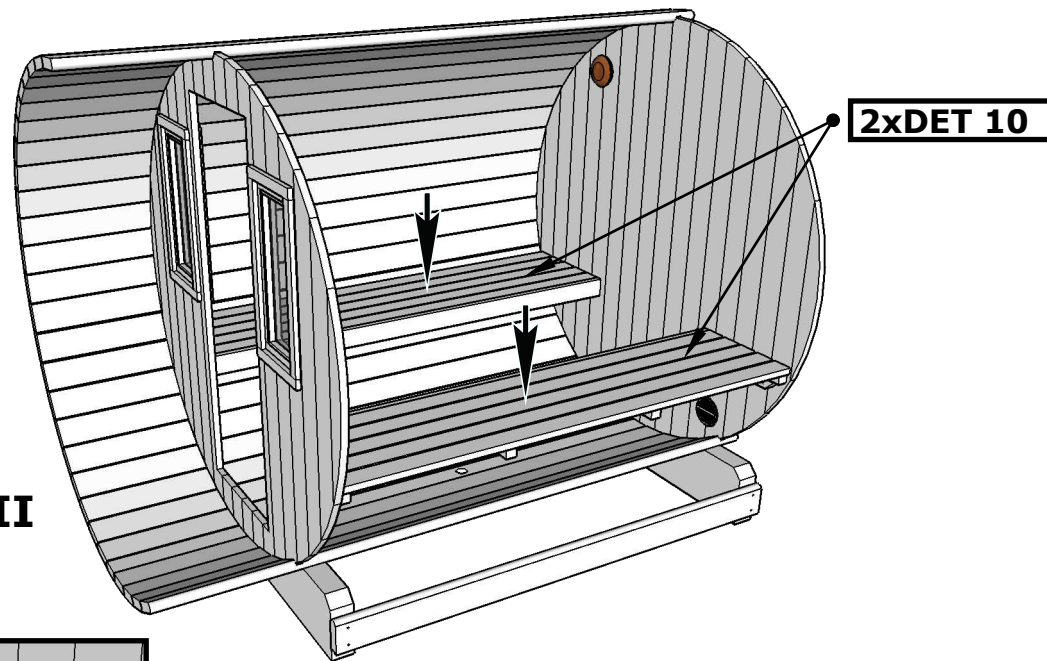


II

Sauna 280, D 200

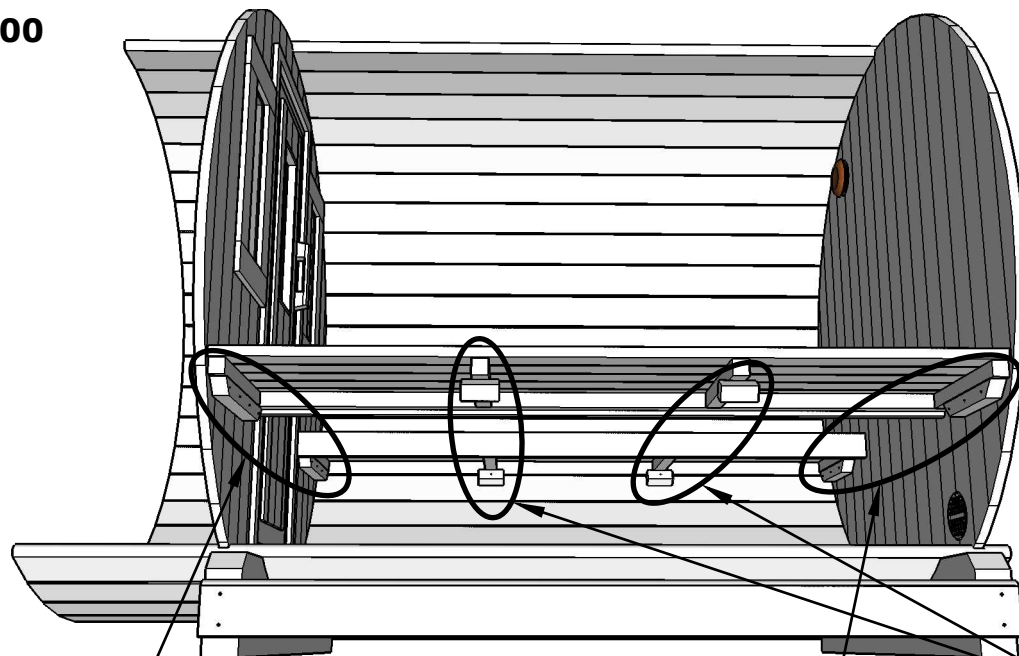


4xDET 11

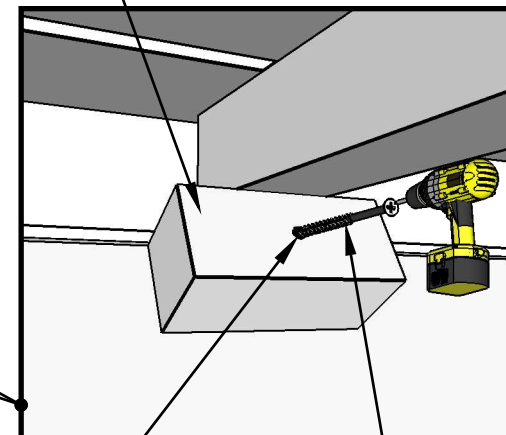



4x H

• NB! Drill hole Ø 4mm, before use screw.


4x H

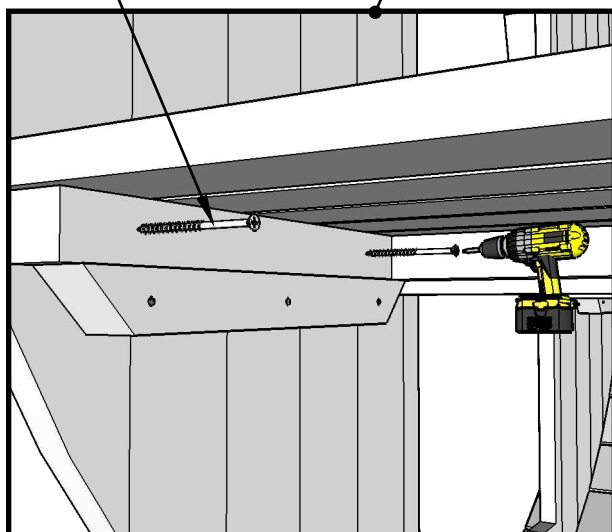

4x H

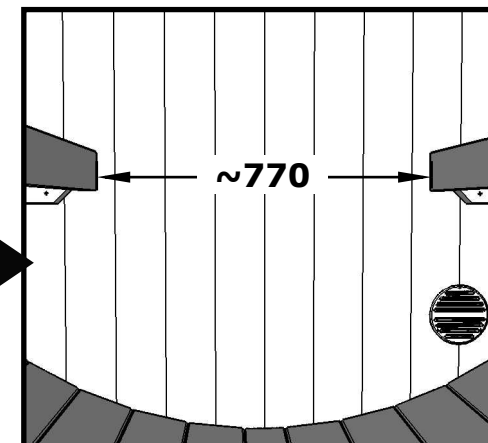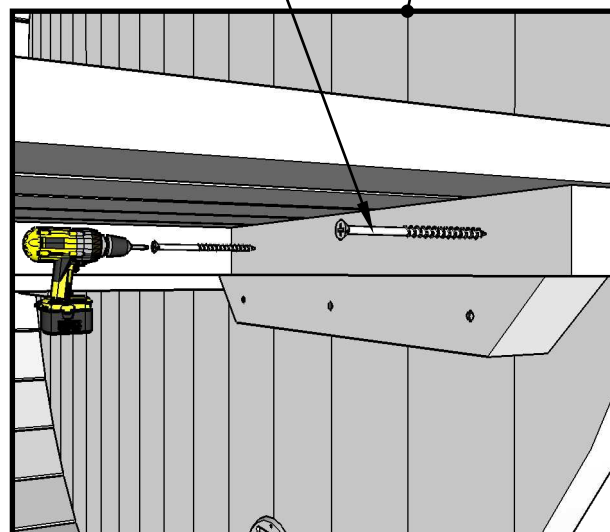


Sauna 280, D 200

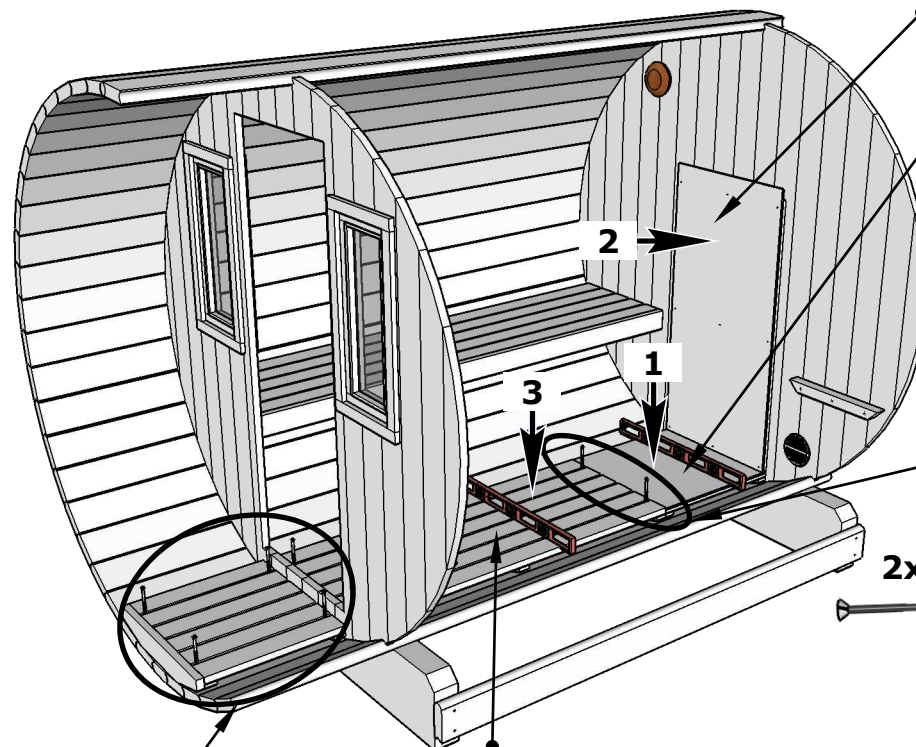

1xDET 13
Cembrit Multi Force panel
(Minerit LW)

1x DET 12
Cembrit Multi Force panel
(Minerit LW)


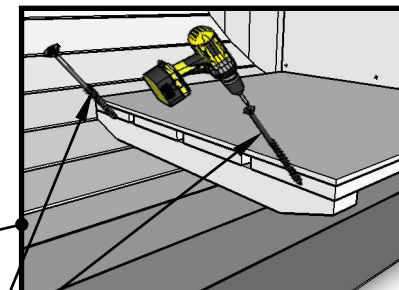


2x H



1x DET 17

1xDET 14

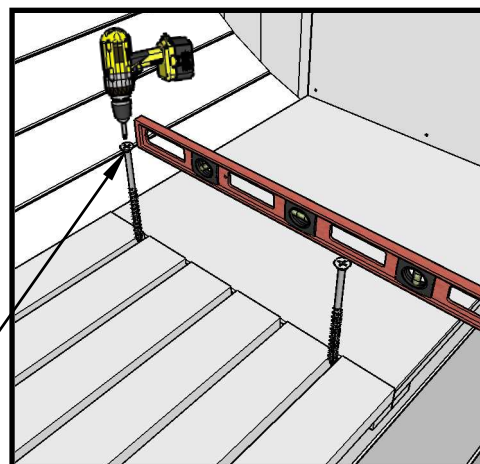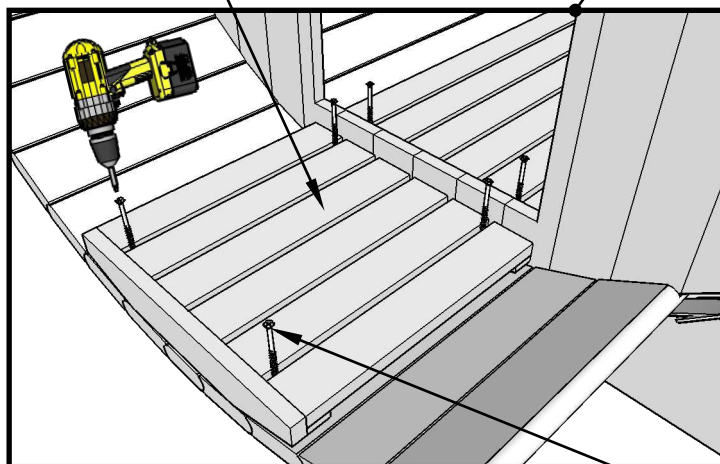



9x I(K)

3x DET L



**NB! If You have electrical heater,
fix DET 13 directly to the wall
without DET L. Then use screws K.**

8x H


Sauna 280, D 200

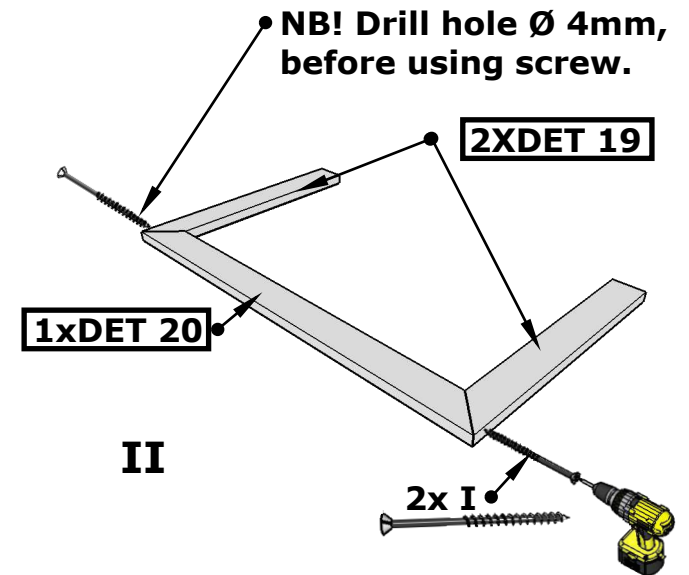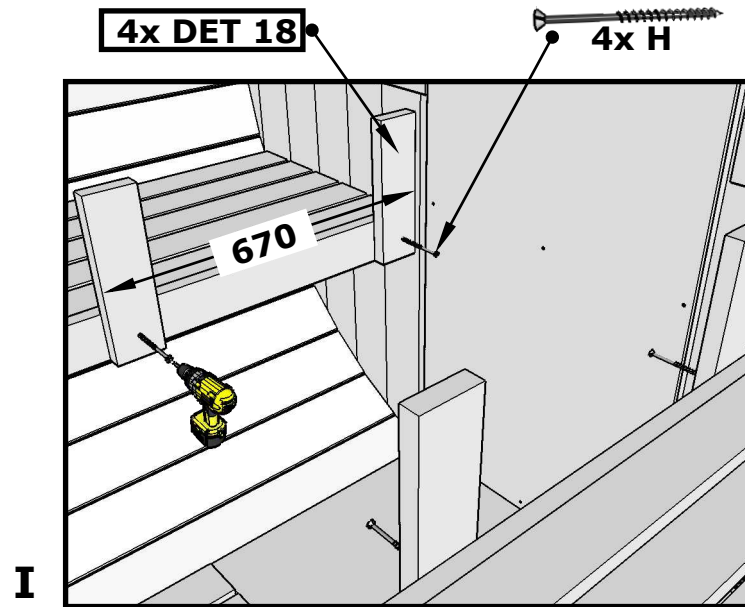

NB! Place sauna stove.

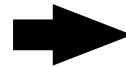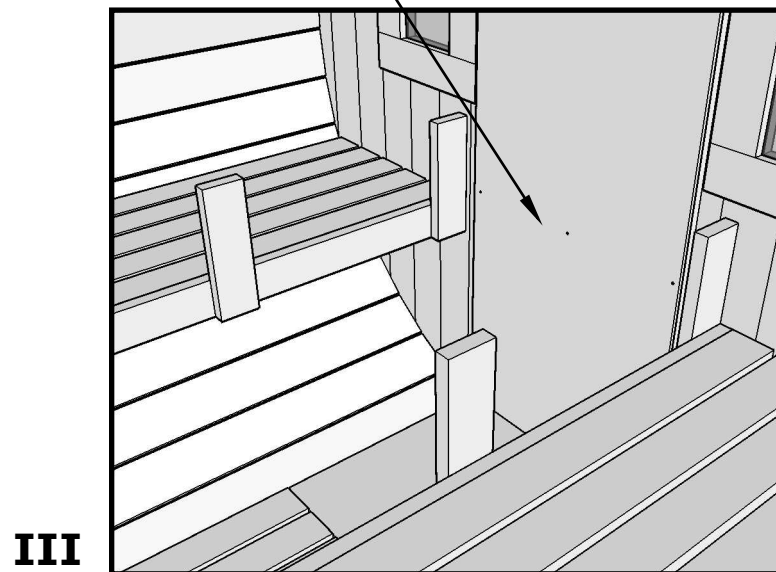


IV

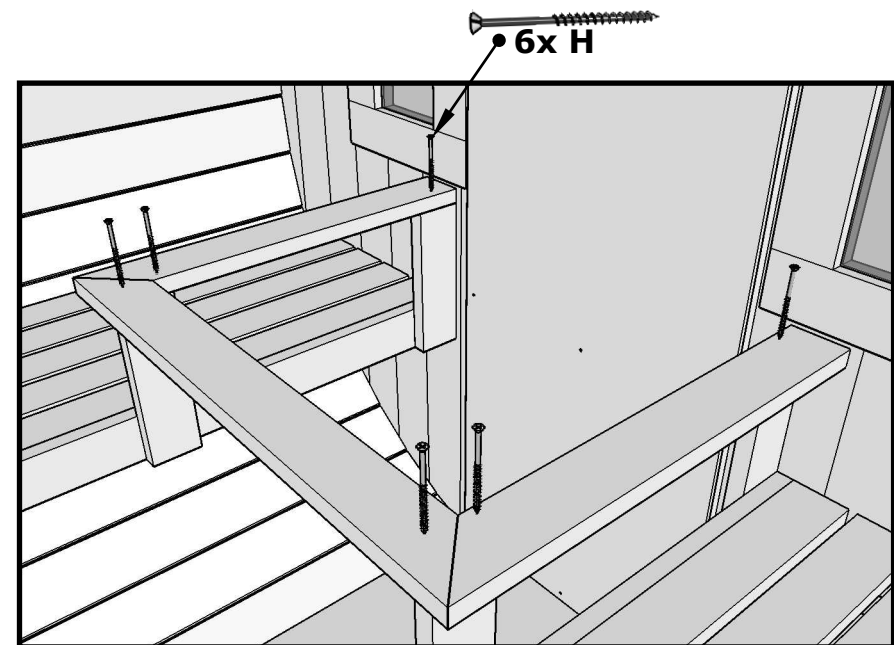



Sauna 280, D 200







1xDET 7

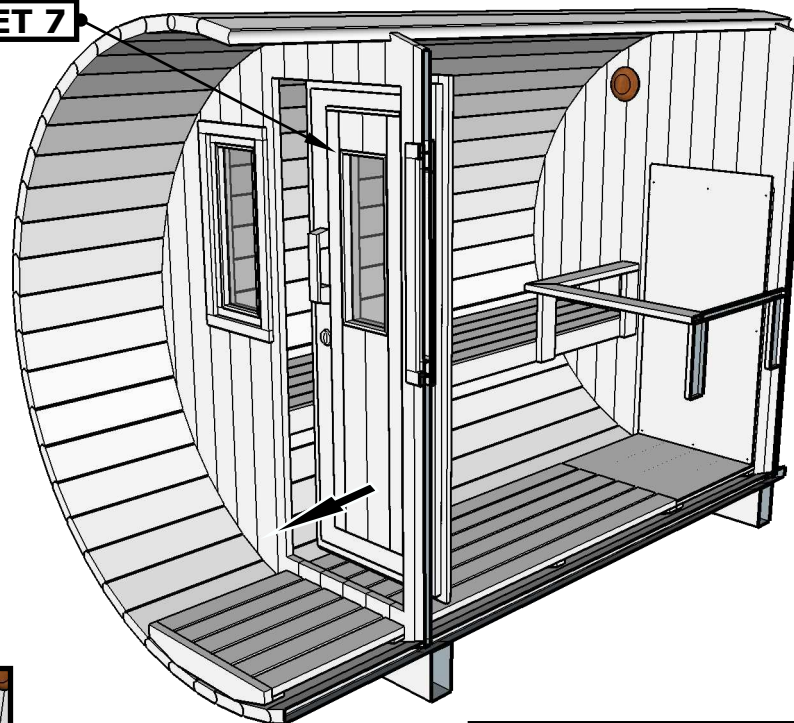


Horizontally fix screw
in every board

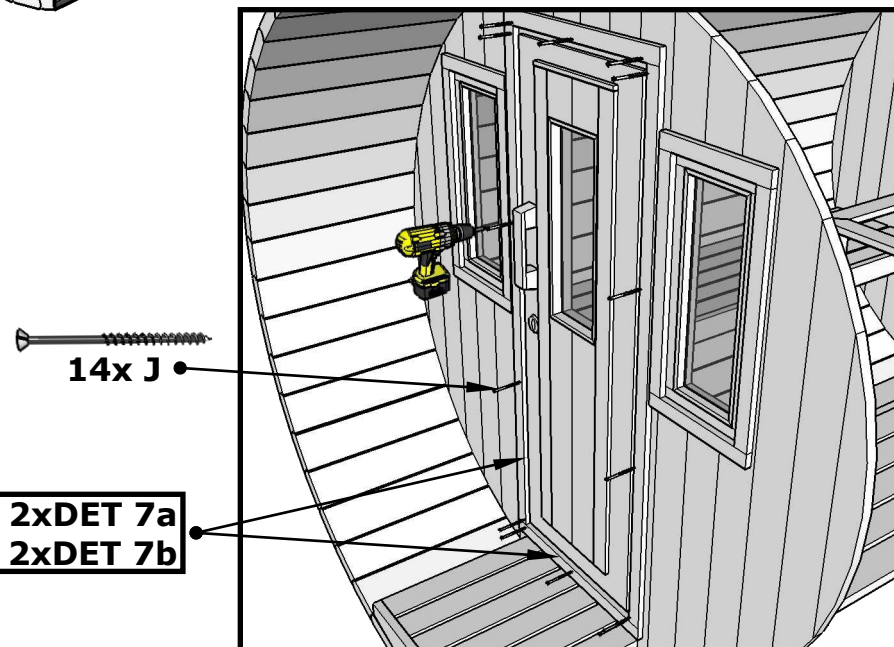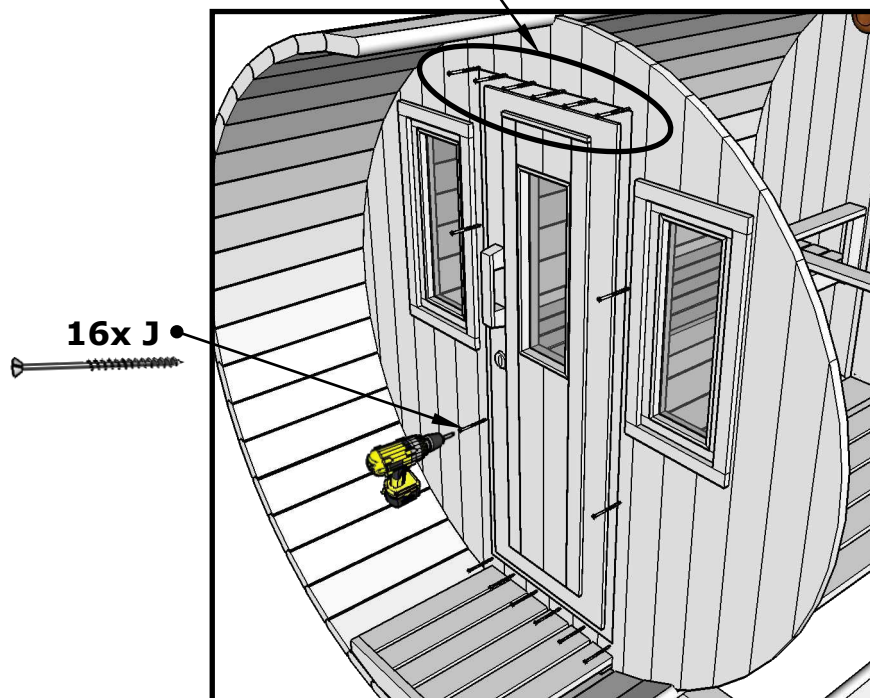


Sauna 280, D 200

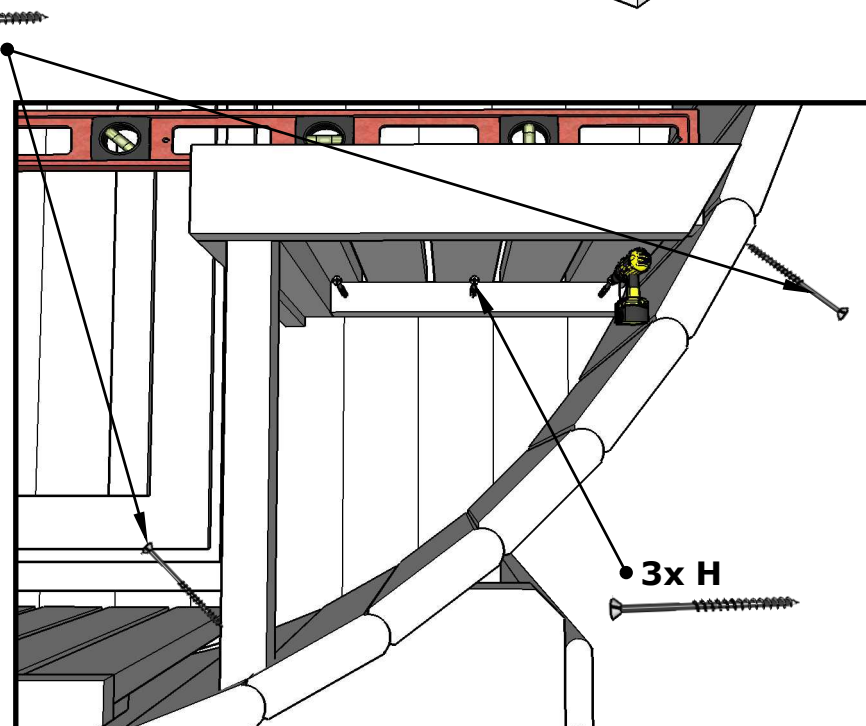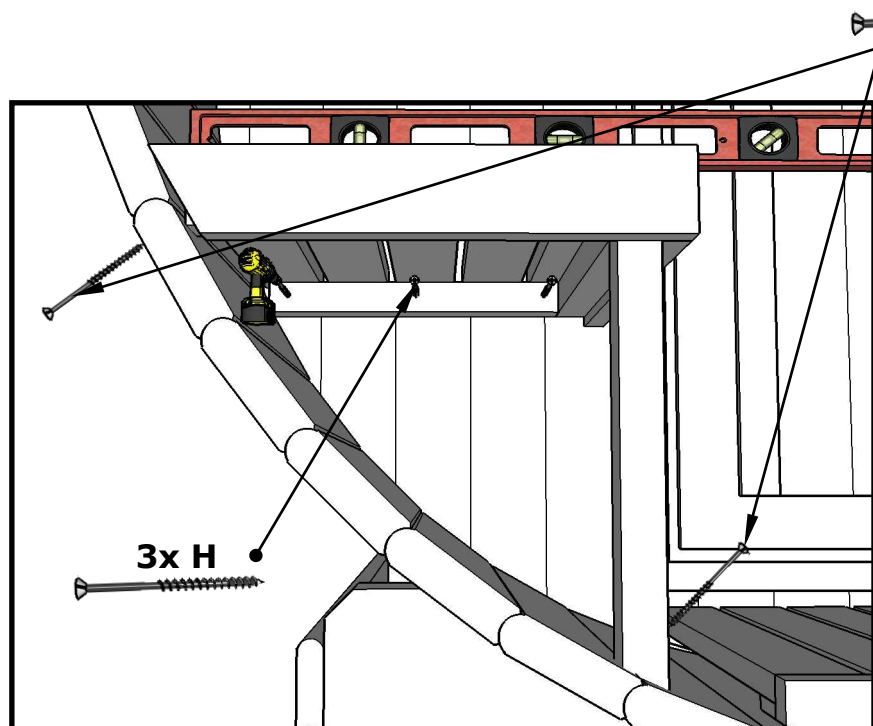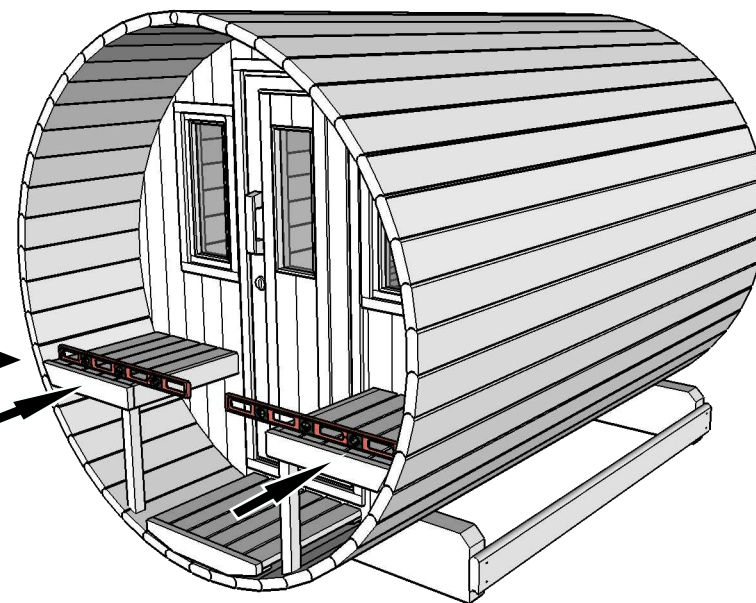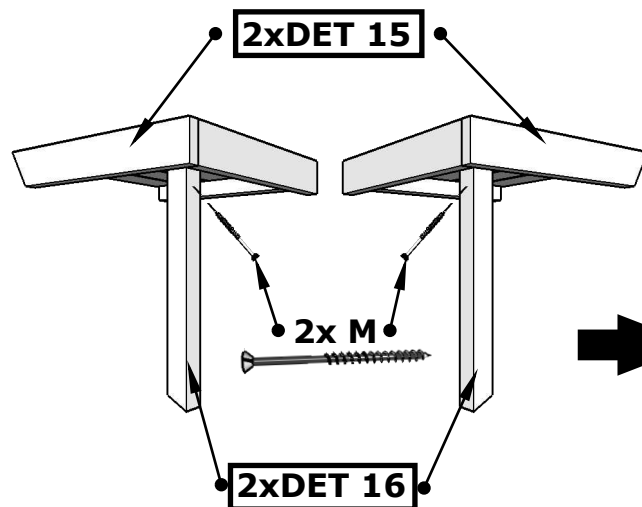



Sauna 280, D 200

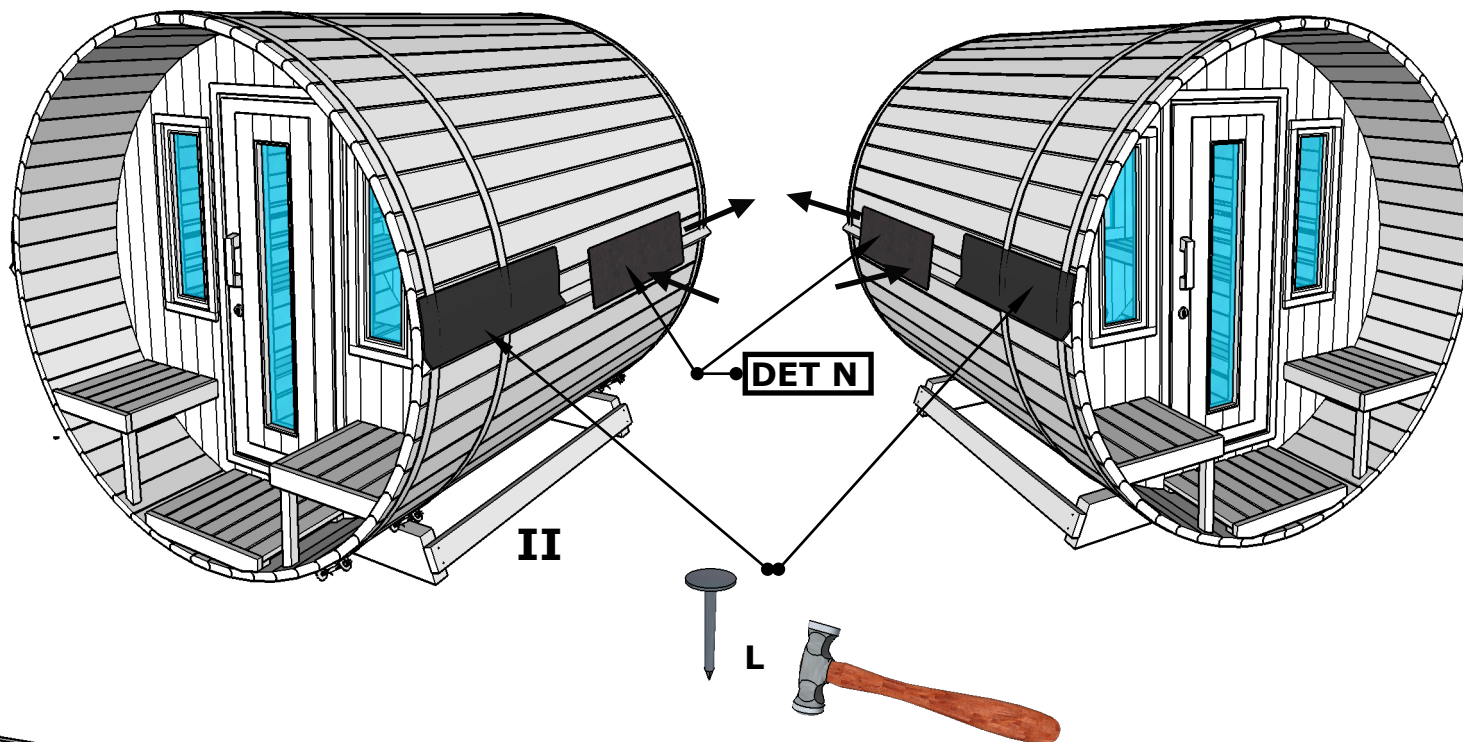

II

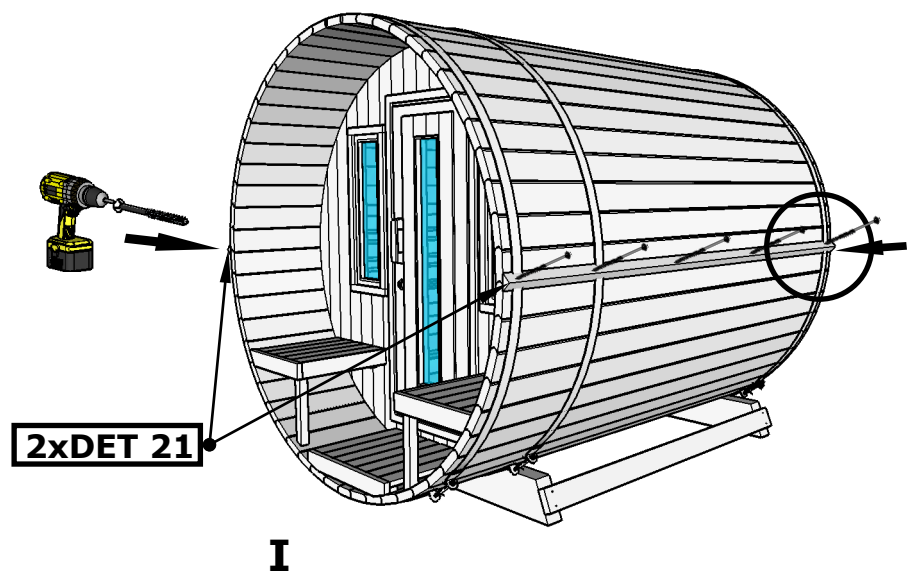

I

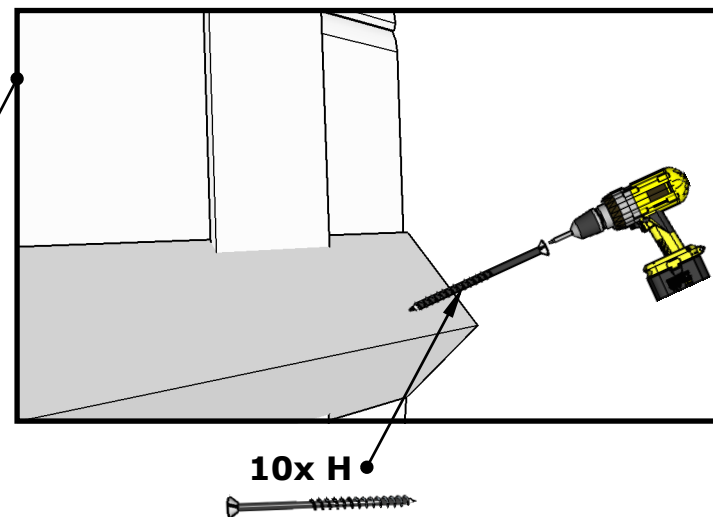
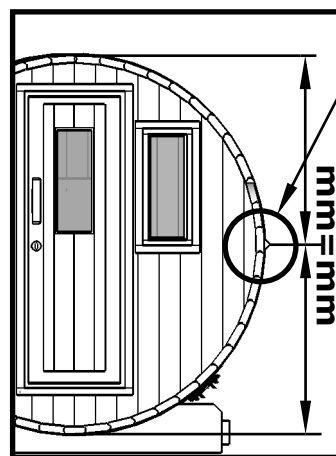


Sauna 280, D 200



NB! Check also roof shingles installation manual inside package.

II

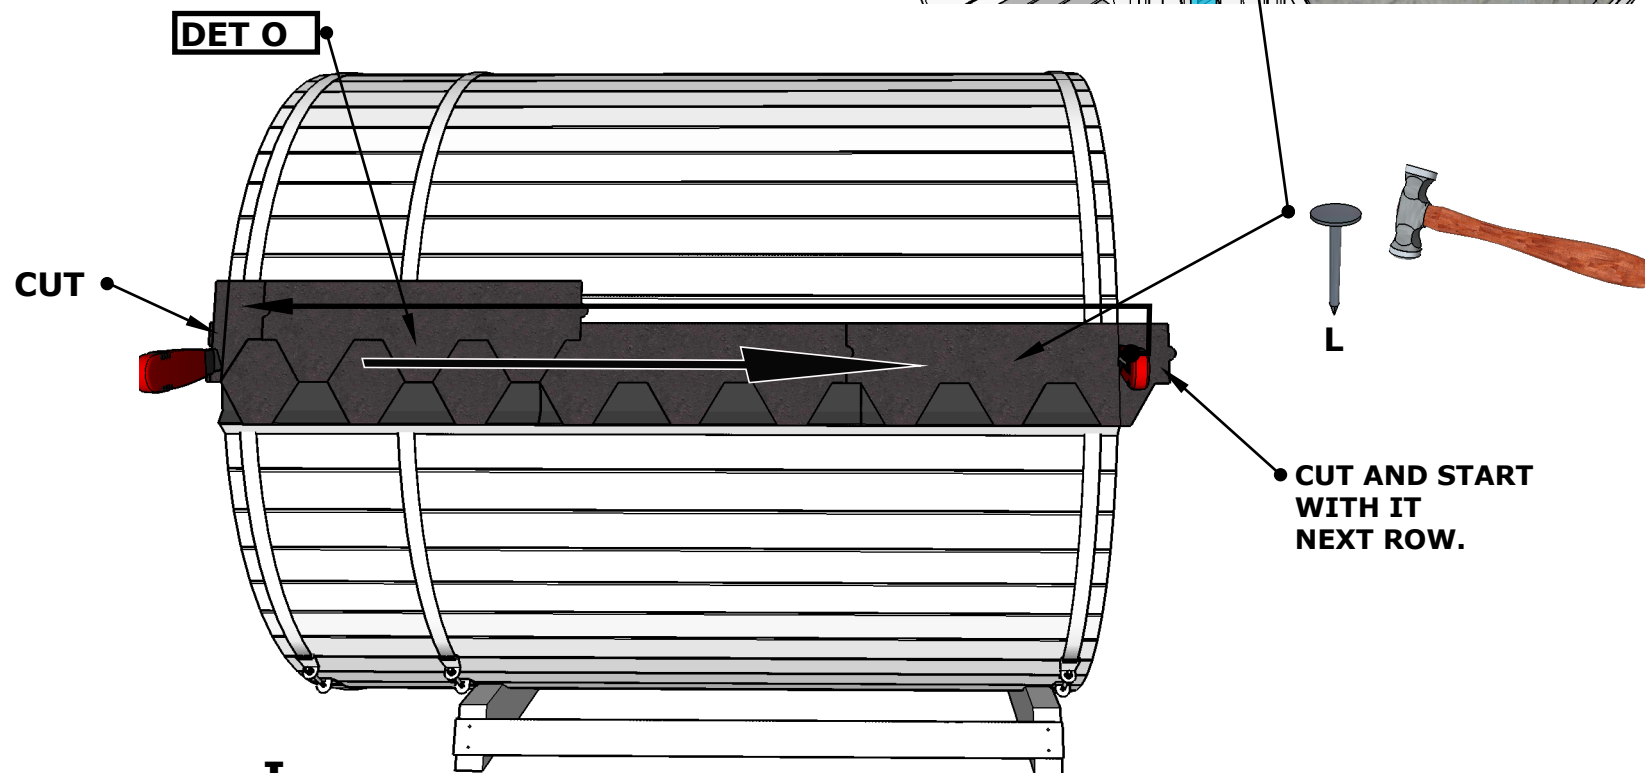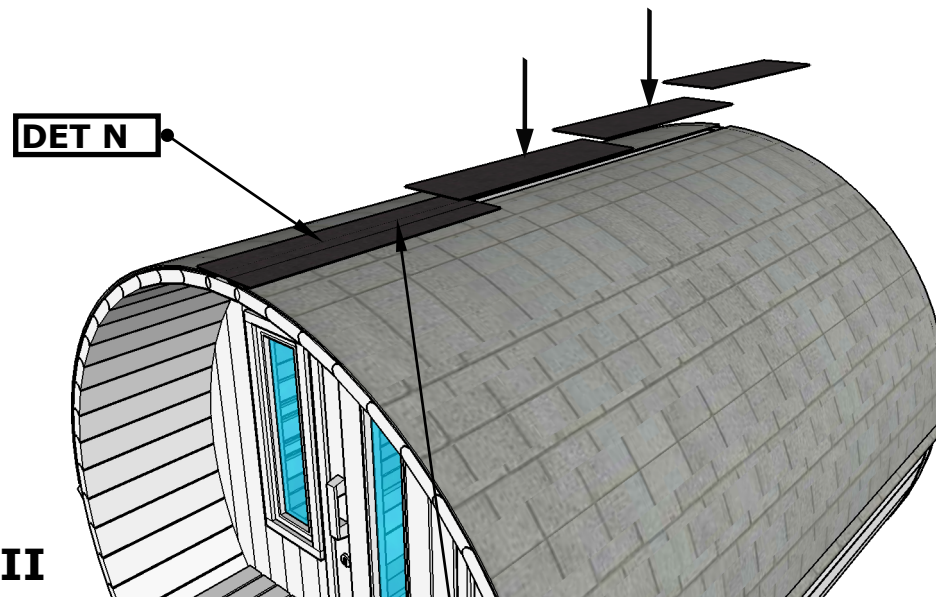


18.

I

Sauna 280, D 200




10xDET 22

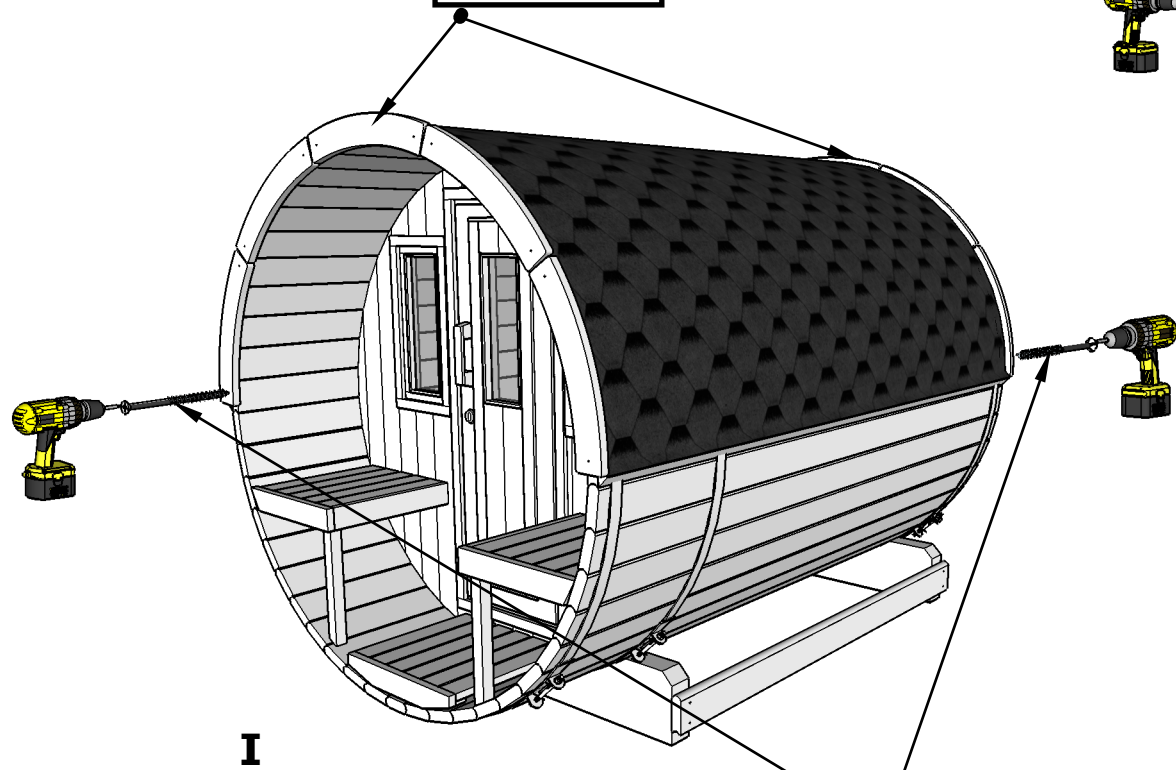

II

REMOVE
DET A

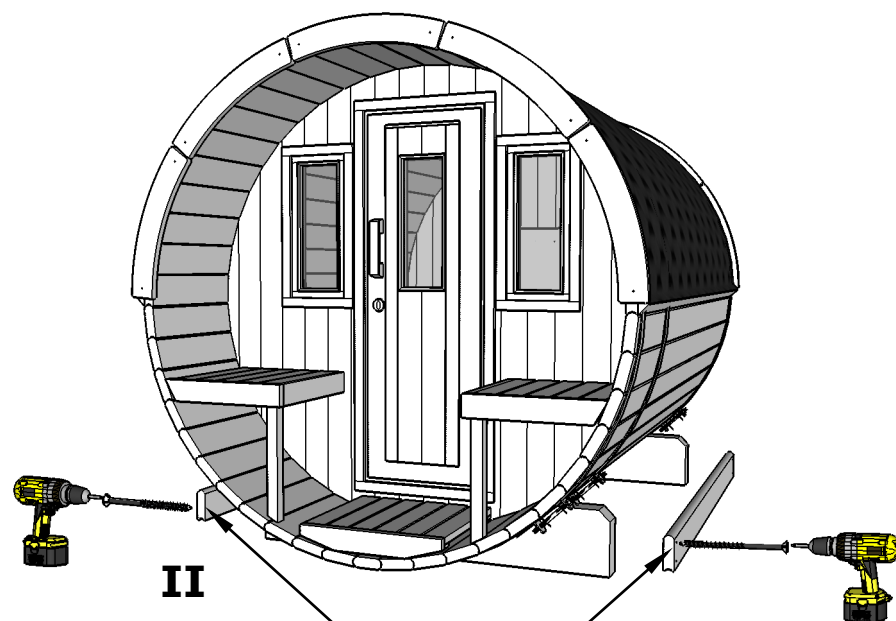

20x H

